


Exploded View and Parts List

Overall

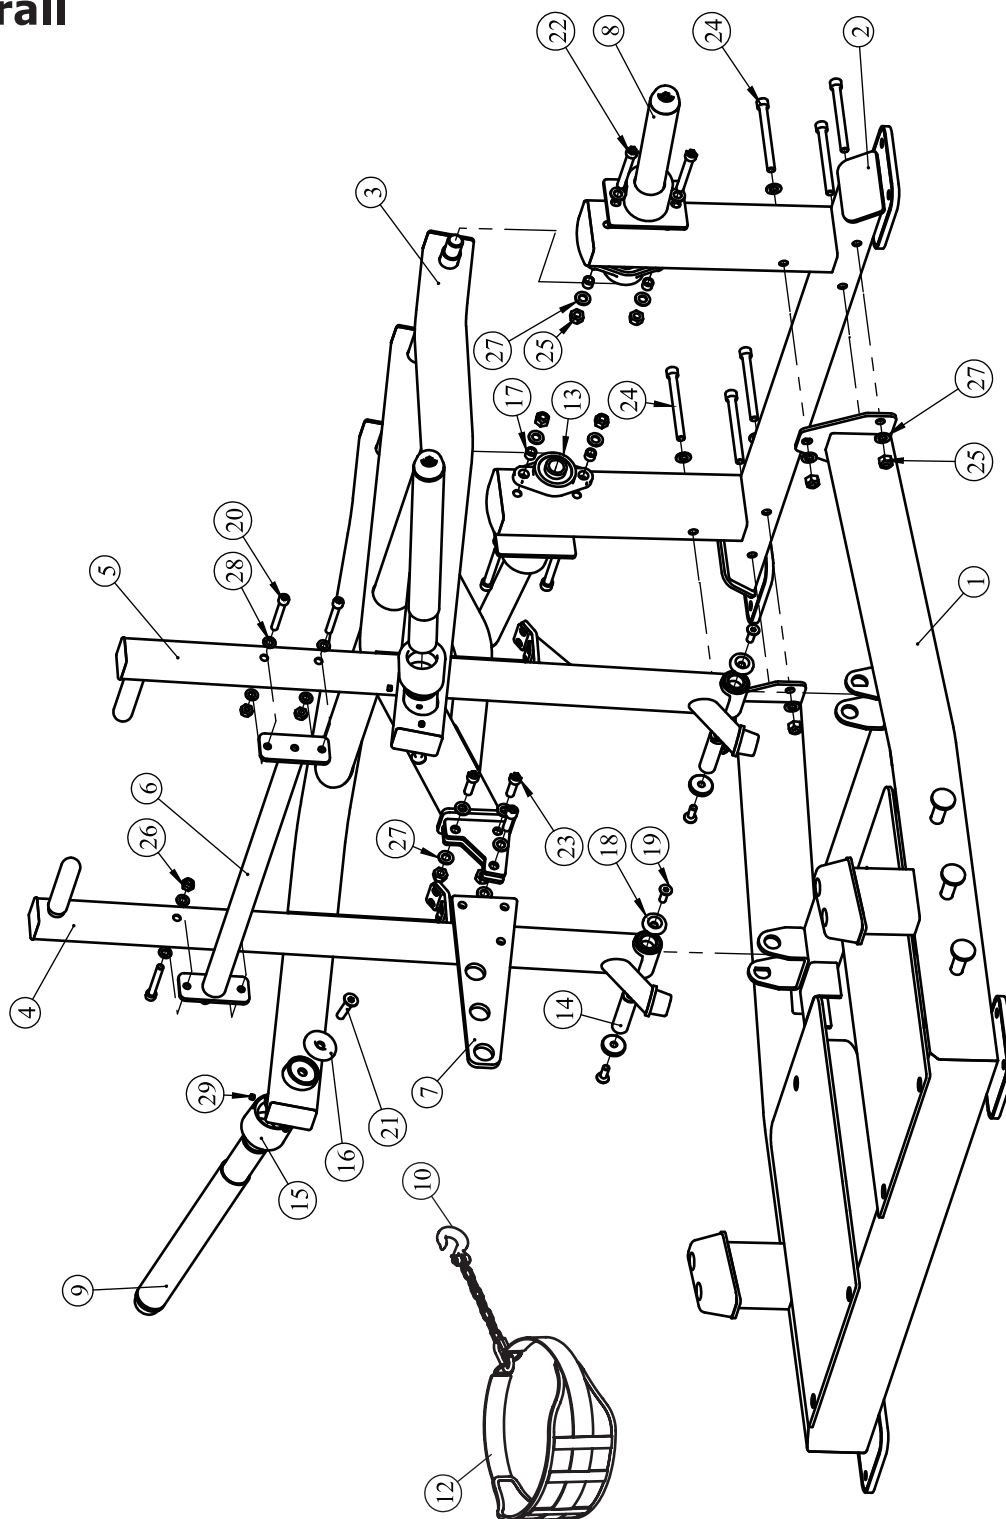

Assembly

STEP 4

1. Attach two Weighted Rod Rack ASSY (#9) and two Rubber Bumper (#15) on each side of Load Rack ASSY (#3), make sure the both sides are symmetrical, using:
two M12*50 FHCS (#21)
two $\Phi 54 \times \Phi 12.5 \times 10.6$ Aluminium Cap (#16)
four M8*6 Socket Set Screw (#29)
2. Attach one Hanging Plate (#7) to Load Rack ASSY (#3), using:
six $\Phi 13 \times \Phi 24 \times 2.5$ Flat Washer (#27)
three M12 Nylon Lock Nut (#25)
three M12*40 SHCS (#23)
3. Assemble the belt (#12) as follows and attach the hook (#10) to Hanging Plate (#7).

Note: Wrench Tighten Bolts.

