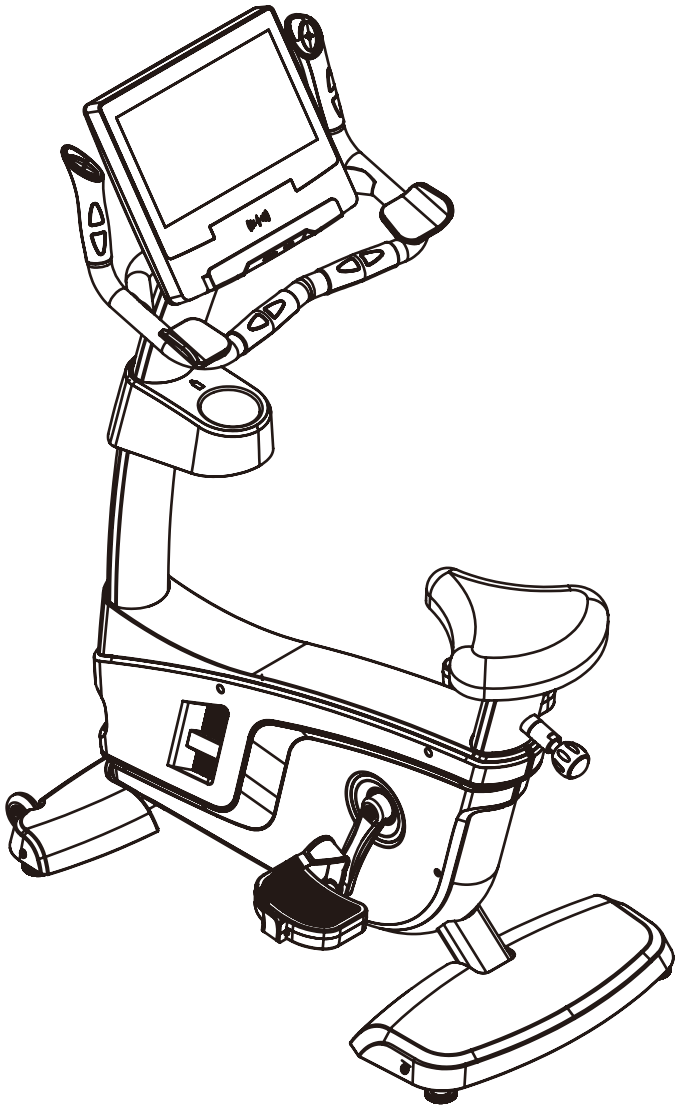


RU970

Upright Bike

Owner's Manual

24M Rev H

CAUTION! Read all precautions and instructions in this manual before using this equipment.

! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

Important Safety Information ---------- 3

Warm Up Exercises ---------- 5

Exploded View and Parts List ---------- 6

Usage And Maintenance ---------- 18

Console Panel Functions ---------- 19

Troubleshooting Guide ---------- 50

Electrical Connection ---------- 51

Maintenance Check List---------- 52

Important Safety Instructions

WARNING! The safety of the product can be maintained only if it is examined regularly for damage and wear. See preventive maintenance section for details.

WARNING! Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death. If you feel faint stop exercising immediately.

LOCATION

1. Keep the area around the product clear of any obstructions, including walls and furniture. Provide at least three feet of clearance behind the unit.
2. Do not use the product outdoors, near swimming pools, or in areas of high humidity.
3. Do not allow other people to interfere in any way with the user or equipment during workout.
4. Supervise closely any children or disabled persons using the product.
5. The product should only be used on a level surface and is with 0.6 meters space around the product.


OPERATION

1. Always follow the console instructions for proper operation.
2. Do not reach into, or underneath, the unit, and do not tip the unit on its side during operation.
3. Never insert objects into any opening of the Bike. If any object fall into this equipment, carefully retrieve it while the unit is not in use. If the object can't be reached, please contact customer services.
4. Never place any containers filled with liquids on the unit, except in the accessory tray or water bottle holder. Containers should be covered with lids.
5. Wear shoes with rubber or high-traction soles. Do not wear shoes with high heels, leather shoes, slippers, or spikes. Make sure no sharp stuff is embedded in the soles.
6. Do not use the bike with bare feet.
7. Keep all loose clothing, shoelaces, and towels away from moving parts.

8. Take extra caution when stepping on or off the bike.
9. Never face backward while using the bike.

Save these instructions for future reference

Training Area and Free Area

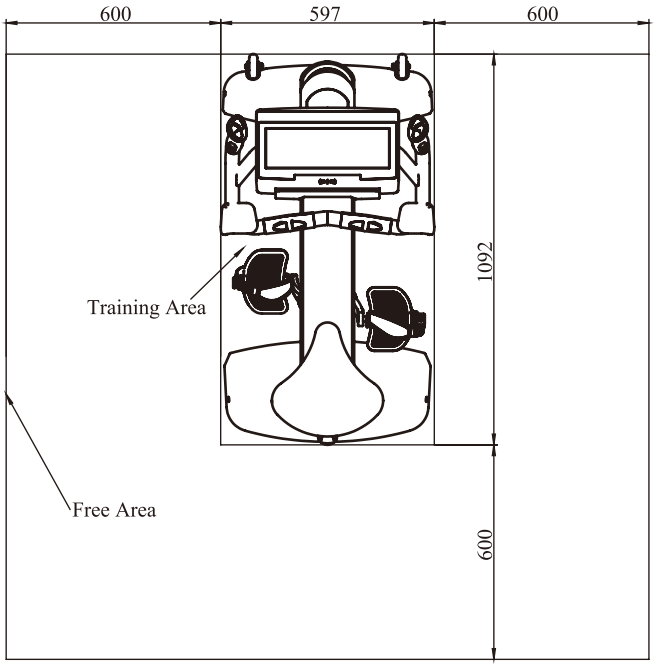

Specifications

Class: SB
Maximum User Weight: 180kg/ 397lbs
Product Dimension: 597*1092*1505mm
Product Total Surface: 597*1092mm
Product Total Mass :

Warm Up Exercises

EXERCISE GUIDELINES

WARNING! Before beginning this or any exercise program, you should consult your physician. This is especially important for individuals over the age of 35 or individuals with pre-existing health problems.

Warming up prepares the body for the exercise by increasing circulation, supplying more oxygen to the muscles and raising body temperature. Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up. The photos on this page show several forms of basic stretching you may perform before your workouts. In order to achieve an adequate warm-up, perform each stretch three times.

TOE TOUCH STRETCH

Stand, bending your knees slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. This will stretch your hamstrings, back of knees, and back.

HAMSTRING STRETCH

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. This will stretch your hamstrings, lower back, and groin.

CALF/ACHILLES STRETCH


With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. To cause further stretching of the achilles tendon, bend your back leg as well. This will stretch your calves, achilles tendons, and ankles.

QUADRICEPS STRETCH


With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. This will stretch your quadriceps and hip muscles.

INNER THIGH STRETCH

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. This will stretch your quadriceps and hip muscles.

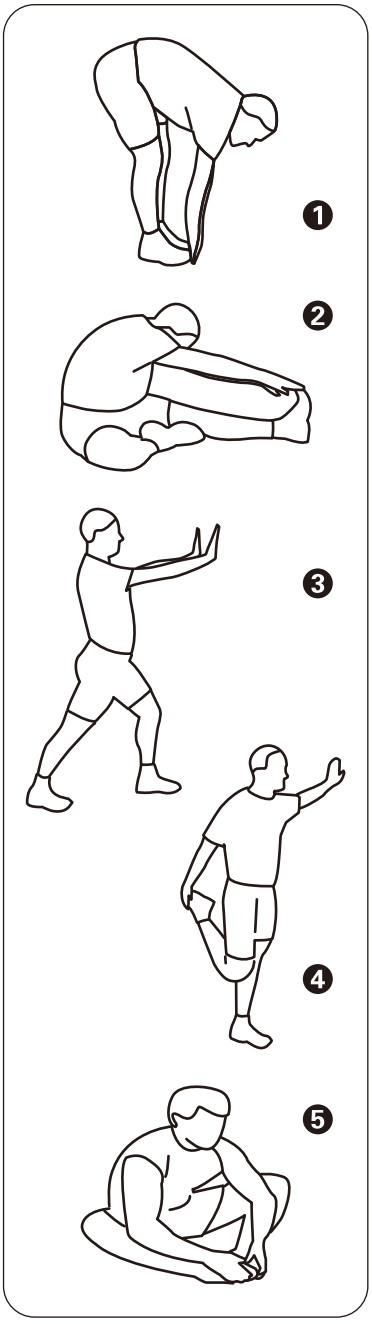


Pulley ASSY

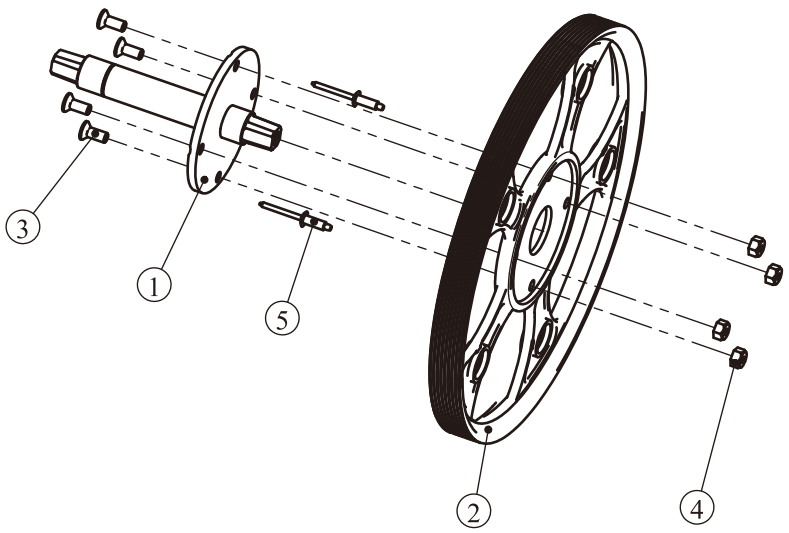


Grade No.	Part No.	Description	QTY
1.5.1	RU7002900	shaft	1
1.5.2	KM1930A4500	pulley	1
1.5.3	CNLM6*15DHS20	screw,M6*15	4
1.5.4	NM6DS2	nut,M6	4
1.5.5	GB126185*13N11	rivet,Φ5*13	2

Top Cover ASSY

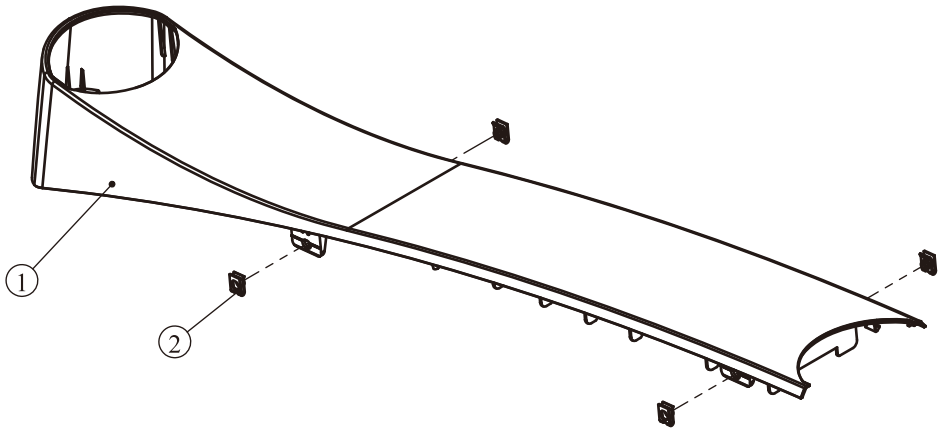

Grade No.	Part No.	Description	QTY
1.39.1	RU7001200	top cover	1
1.39.2	STDP5500	nut,M5	4


Brake ASSY

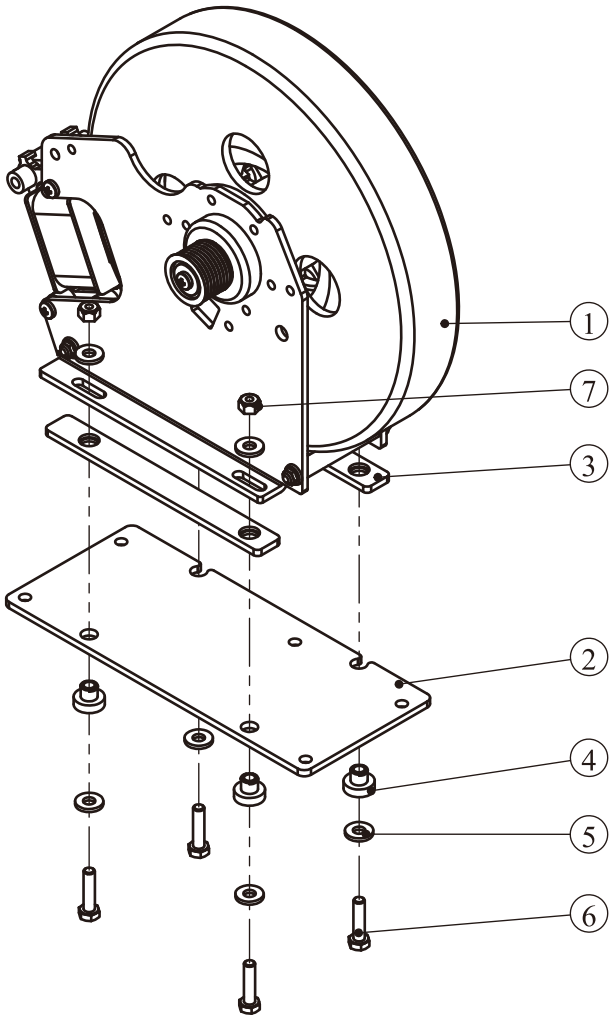

Grade No.	Part No.	Description	QTY
1.12.1	D82	brake	1
1.12.2	CG611100	plate,steel	1
1.12.3	U7B3700	plate,isolation	2
1.12.4	U7B3800	spacer,isolation	4
1.12.5	DQ6DS2A	washer,Φ6.6*Φ15*2	8
1.12.6	GB5781M6*25DS20	hex head bolt,M6*25	4
1.12.7	NM6DS2	nut,M6	4

Left Cover ASSY

Right Cover ASSY

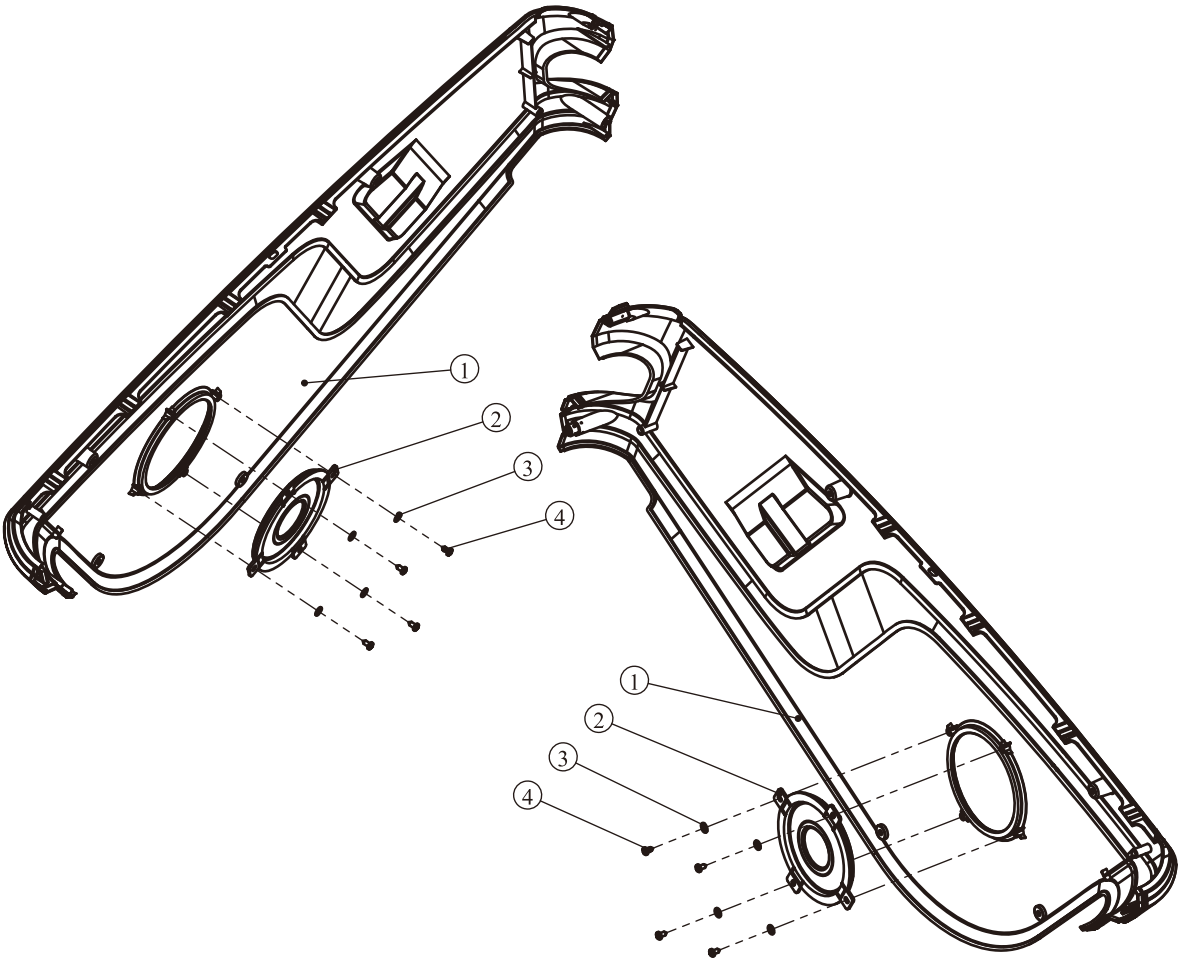

Grade No.	Part No.	Description	QTY
1.37.1	RU7001000V1	left cover	1
1.37.2	RU7001300	crank cover	1
1.37.3	GB955DS2	washer,Φ5.5*Φ10*1	4
1.37.4	GB845ST4.2*9.5DS	screw,ST4.2*9.5	4

Grade No.	Part No.	Description	QTY
1.38.1	RU7001100V1	right cover	1
1.38.2	RU7001300	crank cover	1
1.38.3	GB955DS2	washer,Φ5.5*Φ10*1	4
1.38.4	GB845ST4.2*9.5DS	screw,ST4.2*9.5	4


Main Frame ASSY

Grade No.	Part No.	Description	QTY
1.1	RU950E0100	main frame	1
1.2	RU7001700	sleeve	1
1.3	RU7001900	pop pin assy	1
1.4	GB818M5*15N19	screw,M5*15	2
1.5	GB2766204-2RSC3TPI	bearing,6204	2
1.6	RR7001600	end cover,for bearing,6204	2
1.7	CNLM6*15DHS20	flat head cap screw,M6*15	6
1.8	ECU7P3500	nut,ST4.2	4
1.9	RU70029ASSY	pulley assy	1
1.10	GB894.120FH12	ring,Φ20	2
1.11	B304400	wave washer,Φ20	1
1.12	D82ASSY	brake assy	1
1.13	DQ6DS2A	washer,Φ6.6*Φ15*2	5
1.14	GB936DS12	spring washer,Φ6	4
1.15	GB5781M6*15DS20	hex head bolt,M6*15	4
1.16	RU7004300V1	tightener frame	1
1.17	GB2766203-2RSC3TPI	bearing,6203	2
1.18	DQ17DHS2	washer,Φ17.2*Φ23*0.35	2
1.19	GB894.117FH12	ring,Φ17	1
1.20	RU7004800	spacer,for tightener	3
1.21	GB70M5*15DS20	socket head cap screw,M5*15	3
1.22	GB41M6DS2	hex nut,M6	1
1.23	GB41M8DS2	hex nut,M8	1
1.24	TBT0800	tread bushing	1
1.25	TBT1800	spring	1
1.26	GB5781M8*80DS2	hex head bolt,M8*80	1
1.27	GB958DS20	washer,Φ9*Φ16*1.6	1
1.28	DXD420J8A	belt,420J8	1

Main Frame ASSY


Grade No.	Part No.	Description	QTY
1.29	GB70M6*20DHS20	socket head cap screw,M6*20	2
1.30	U7B4000	spacer,for isolation	1
1.31	GB9512DS2	washer,Φ13*Φ24*2.5	1
1.32	C66	lower PCB	1
1.33	GB818M5*10DS2	screw,M5*10	2
1.34	L1400M43025-XHB-6	lower cable,for console	1
1.35	RU7000500	seat support frame	1
1.36	IN-D10134700	spacer	1
1.37	RU90010ASSY	left cover assy	1
1.38	RU90011ASSY	right cover assy	1
1.39	RU90012ASSY	top cover assy	1
1.40	GB818M5*15DHS20	screw,M5*15	7
1.41	GB845ST4.2*16DHS	screw,ST4.2*16	6
1.42	HA18LL-R	right crank	1
1.43	HA18LL-L	left crank	1
1.44	GB5787AM8*25DHS20NL	hexagon flange bolts,M8*25	2
1.45	RU7003700	crank end cap	2
1.46	GB126183.2*11N11	rivet,Φ3.2*15	2
1.47	DQCH02-SBD	magnetic ring	1
1.48	SD2.5*75	cable tie	5
1.49	SD4*400	cable tie	5
1.50	RU950E2000	cover	1
1.51	RU9004900	Fixturer 1	1
1.52	GB846ST2.9*13DS	screw,ST2.9*13	2
1.53	Z38	plug	1
1.54	L1800RJ45-RJ45Z-8	lower cable,for internet	1
1.55	GB819M3*10DHS2	aross Recessed Countersunk Head Screw,M3*10	2
1.56	GB70M4*10N19	socket head cap screw,M4*10	4

Main Frame ASSY

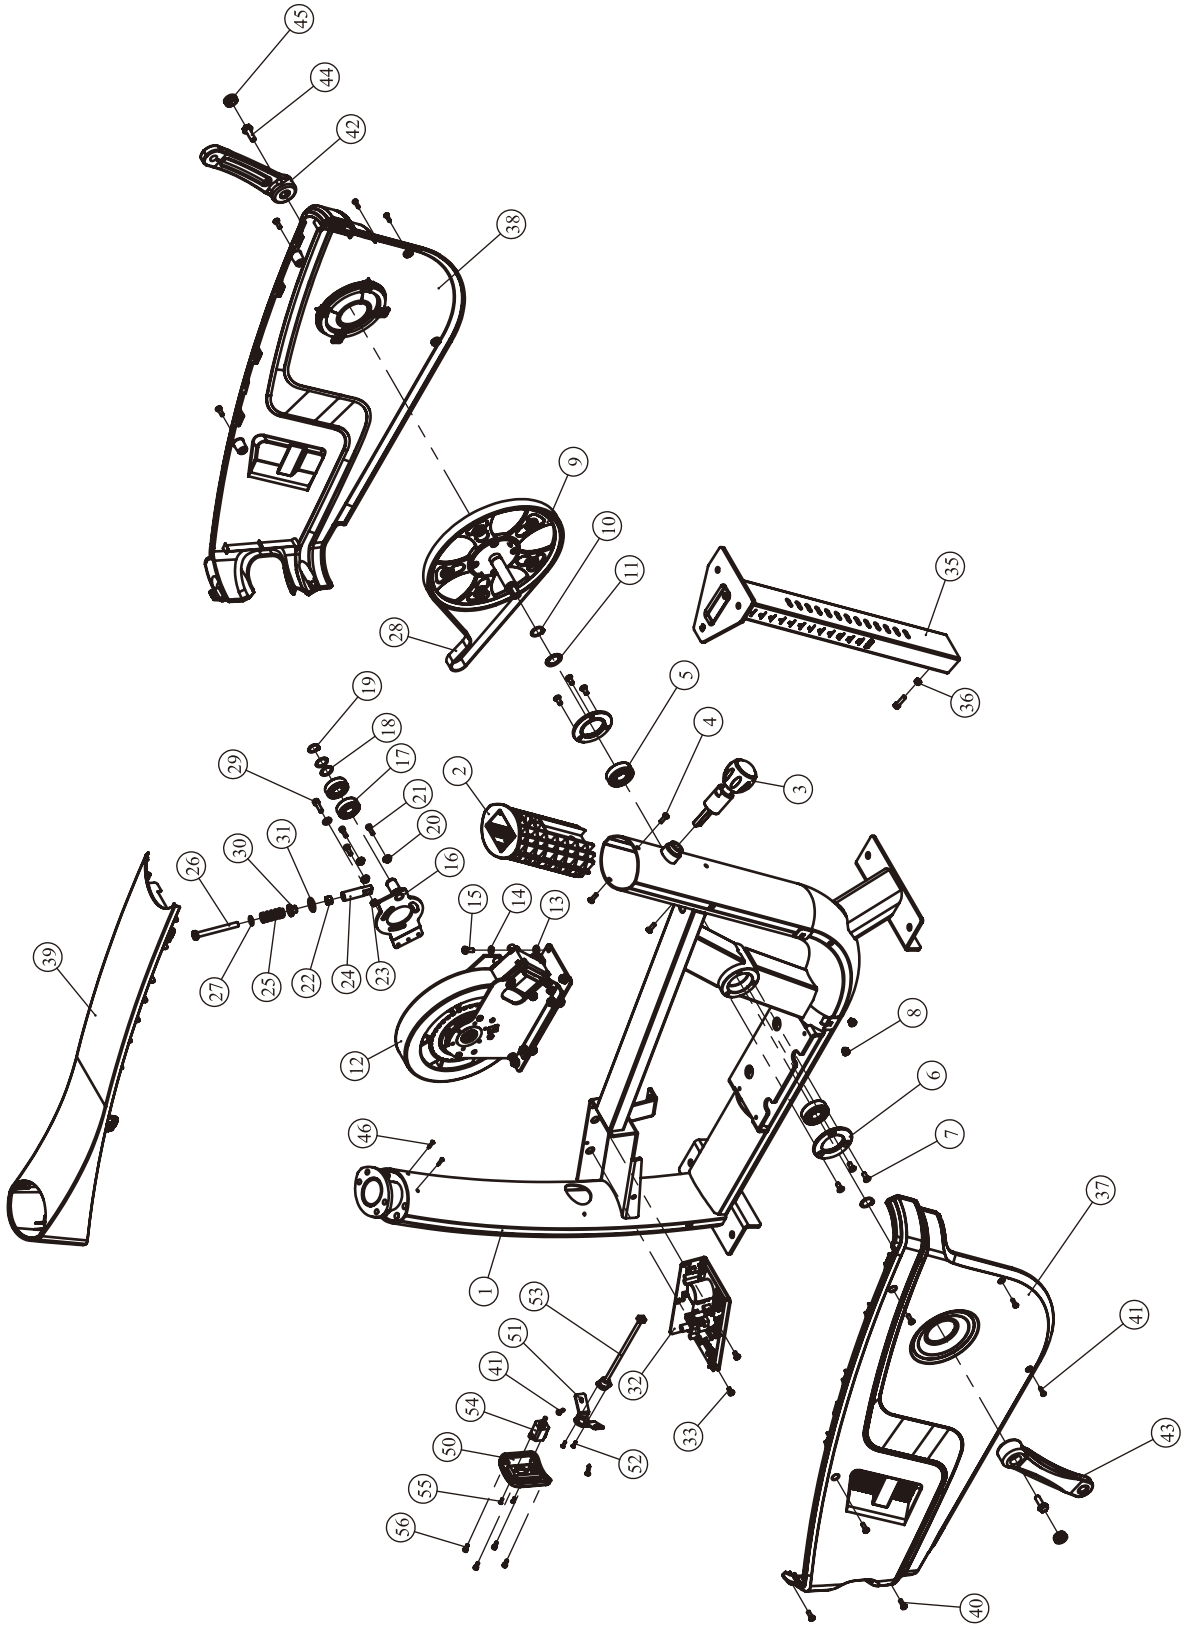

Front Base ASSY


Rear Base ASSY

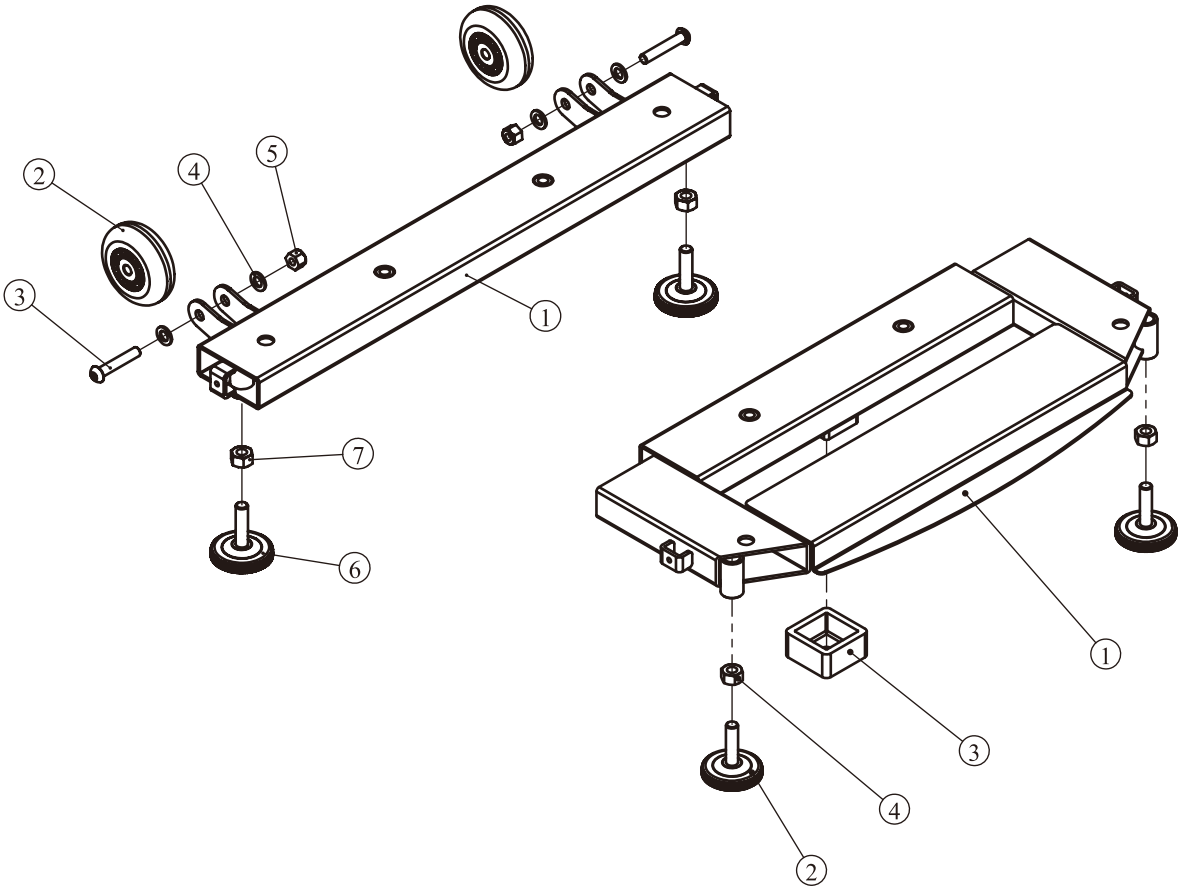

Grade No.	Part No.	Description	QTY
3.1	RU7000300	front base frmae	1
3.2	DP86703100V1	PU,wheel	2
3.3	PNLM8*45DHS2	button head cap screw,M8*45	2
3.4	GB958DHS2	washer,Φ9*Φ16*1.6	4
3.5	NM8DHS2	nut,M8	2
3.6	ASCENT2900	leveler foot	2
3.7	GB41M10DS2	hex nut,M10	2


Grade No.	Part No.	Description	QTY
4.1	RU7000400	rear base frame	1
4.2	ASCENT2900	leveler foot	2
4.3	G439506700	pipe box	1
4.4	GB41M10DS2	hex nut,M10	2

Handlebar ASSY

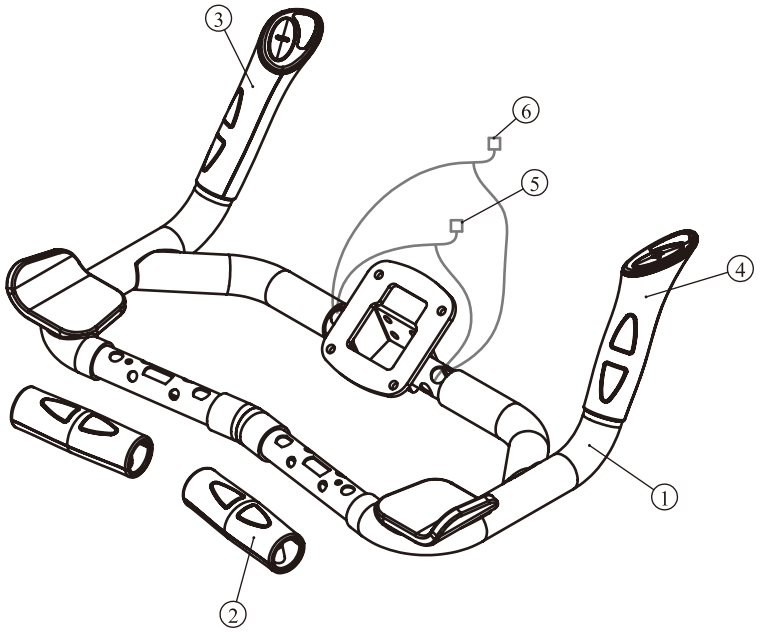

Grade No.	Part No.	Description	QTY
5.1	RU9700600	handlebar,dip	1
5.2	X10V1	heart rate ,steelless	2
5.3	X12V3	heart rate ,steelless	1
5.4	X13V3	heart rate ,steelless	1
5.5	L1600ST0-M43025-4	cable,for pulse	1
5.6	L900M43020-M35155-4	handle switch cable for pulse	1

Upright Frame ASSY

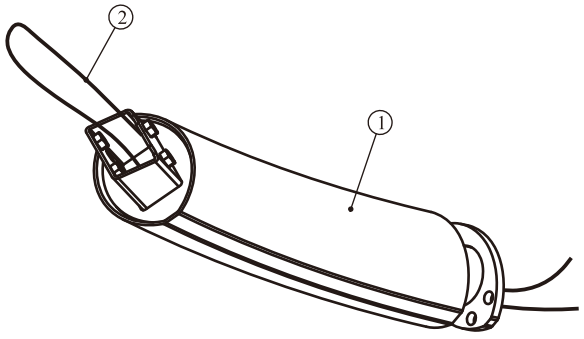


Grade No.	Part No.	Description	QTY
2.1	RU7000200V2	upright frame	1
2.2	ZX1*2	leading wire	1.1

Console ASSY

Grade No.	Part No.	Description	QTY
15.1	RU960DZB01	front cover,for console	1
15.2	RU960DZB02	rear cover,for console	1
15.3	RU960DZB03	lower cover,for console	1
15.4	CM156-R970H	touch panel	1
15.5	TFT156-AC2990ZNB	21.5-inch display screen	1
15.6	L300XHB-XHB-4A	wireless charging connection cable	1
15.7	B303-4050B	wireless charging module	1
15.8	RR960B0700	console support frame	1
15.9	AC4050B5500ASSY	USB board assy	1
15.10	B299-R970H	mainboard	1
15.11	AC2990ZNB0300	copper nut M3	9
15.12	B313-AC2990ZNB	touch control board	1
15.13	PMS-SWFW3*6	cross recessed pan head screw assembly M3*6	18
15.14	B312-R960B	central control board	1
15.15	L200H2506-M43020-8	upper section of central control line	1
15.16	AC2990ZNB0200	panel holder	4
15.17	AC2990ZN0200	earphone board holder	2
15.18	GB818M4*16DHS2	phillip screw,M4*16	9
15.19	GB845ST2.9*6.5DS	phillip screw,ST2.9*6.5	4
15.20	GB845ST2.9*9.5DS	phillip screw,ST2.9*9.5	8
15.21	GB845ST4.2*13DHS	phillip screw,ST4.2*13	6
15.22	GB6560M4*8DSG	phillip screw,M4*8	1
15.23	GB862.24DS12	serrated lock washers Φ4	1
15.24	L320-395G179X30P3930000	EDP screen data cable	1
15.25	L340-395GH20004DM227000	touch panel control cable	1
15.26	L300SH-YP35-USB-12A	USB headphone adapter cable	1
15.27	GGMZ03-DC	photosensitive module	1
15.28	L350PH-TH-4C	photosensitive module adapter cable	1
15.29	TX04-DC	WIFI antenna	3
15.30	L300RJ45-RJ45B-DC	network cable W/Socket	1
15.31	L280XHB-PH-6	power data communication cable	1
15.32	L200XHB-M43020-4	heart rate cable	1
15.33	L200XHB-M5559-2	power cable	1
15.34	L200M43025-4	resistance cable	1
15.35	L200JD43-JD-1-04	earth wire	1
15.36	L700JD43-SH62002-1P	earth wire	1
15.37	AC4050B5800	foam pad 1	6
15.38	AC4050B5900	foam pad 2	4
15.39	DQLY03-4050C	bluetooth module	1
15.40	L250PH-TJC3B-5A	bluetooth module connection cable	1


Console ASSY

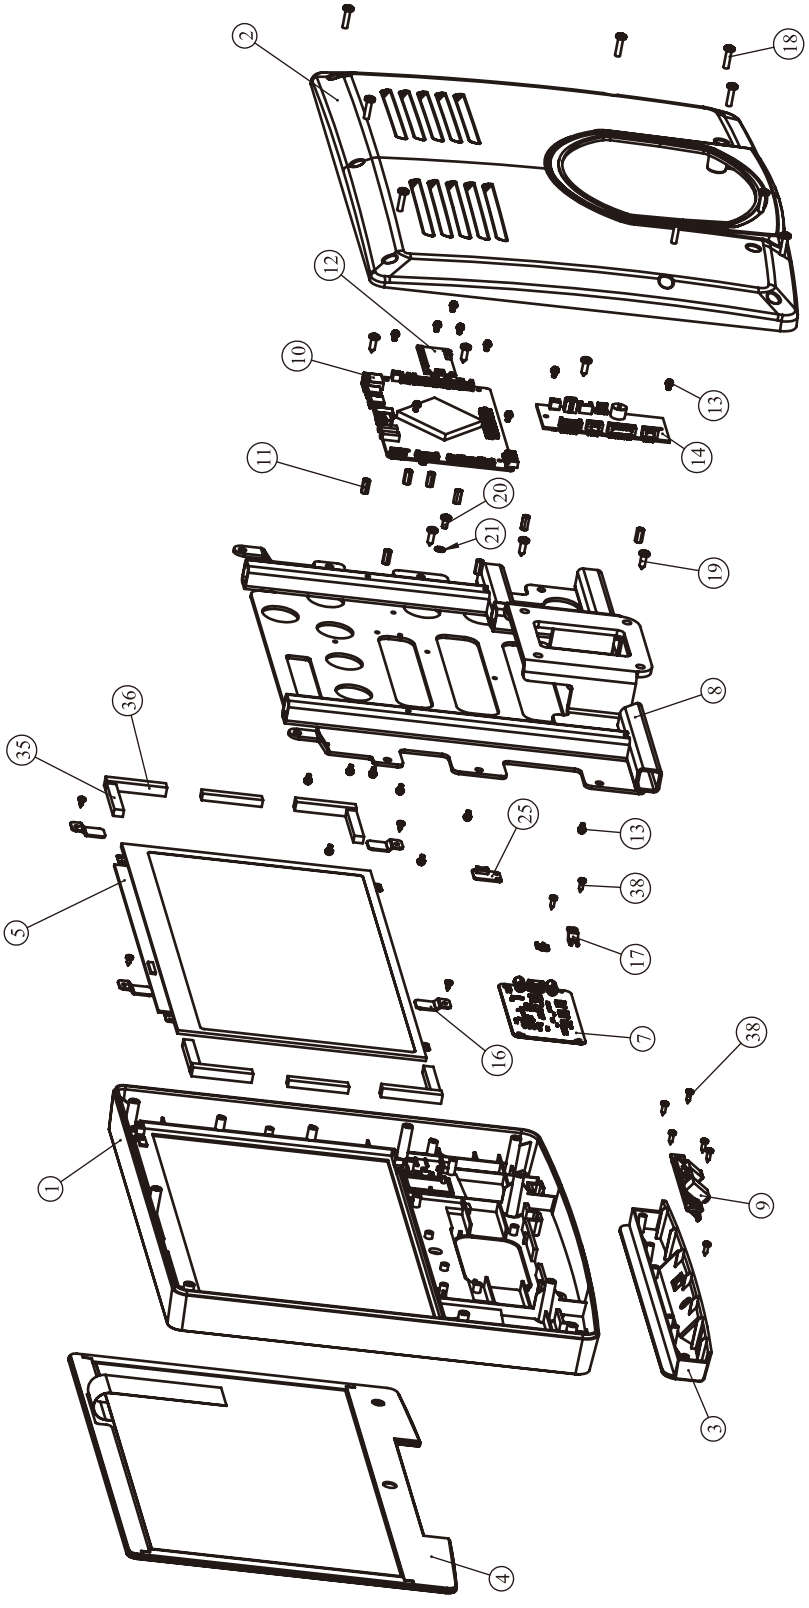


OVER RALL

Item No.	Part No.	Description	QTY
1	RU970H-WX01ASSY	main frame assy	1
2	RU900B02ASSY	upright frame assy	1
3	RU70003ASSY	front base assy	1
4	RU70004ASSY	rear base assy	1
5	RU97006ASSY	handlebar assy	1
6	RU7000800	front base cover	1
7	RU7000900	rear base cover	1
8	RU7007500	bottle support frame	1
9	RU7001400	water bottle bracket	1
10	RU700DZB08	front scarf	1
11	RU700DZB09	rear scarf	1
12	B14033000	seat pad	1
13	JD-59A-L-PU415	left pedal	1
14	JD-59A-R-PU415	right pedal	1
15	RU970H-WXDZBASSY	console assy	1
16	SPQ5A-2	adaptor,DC12V5A	1
17	A01-4	power cable	1
18	GB845ST4.2*16DHS	phillip screw,ST4.2*16	4
19	GB9074.16M10*25DS20	Hexagon head bolt and external serrated lock washer assy,M10*25	8
20	GB938DS12	spring washer,Φ8	8
21	GB70M8*20DS20	socket head bolt,M8*20	2
22	GB70M8*55DS20	socket head bolt,M8*55	2
23	GB818M5*15DHS20	screw,M5*15	4
24	GB958DS2	washer, Φ9*Φ16*1.6	8
25	GB5781M8*20DS20	hex head bolt,M8*20	4

OVER RALL

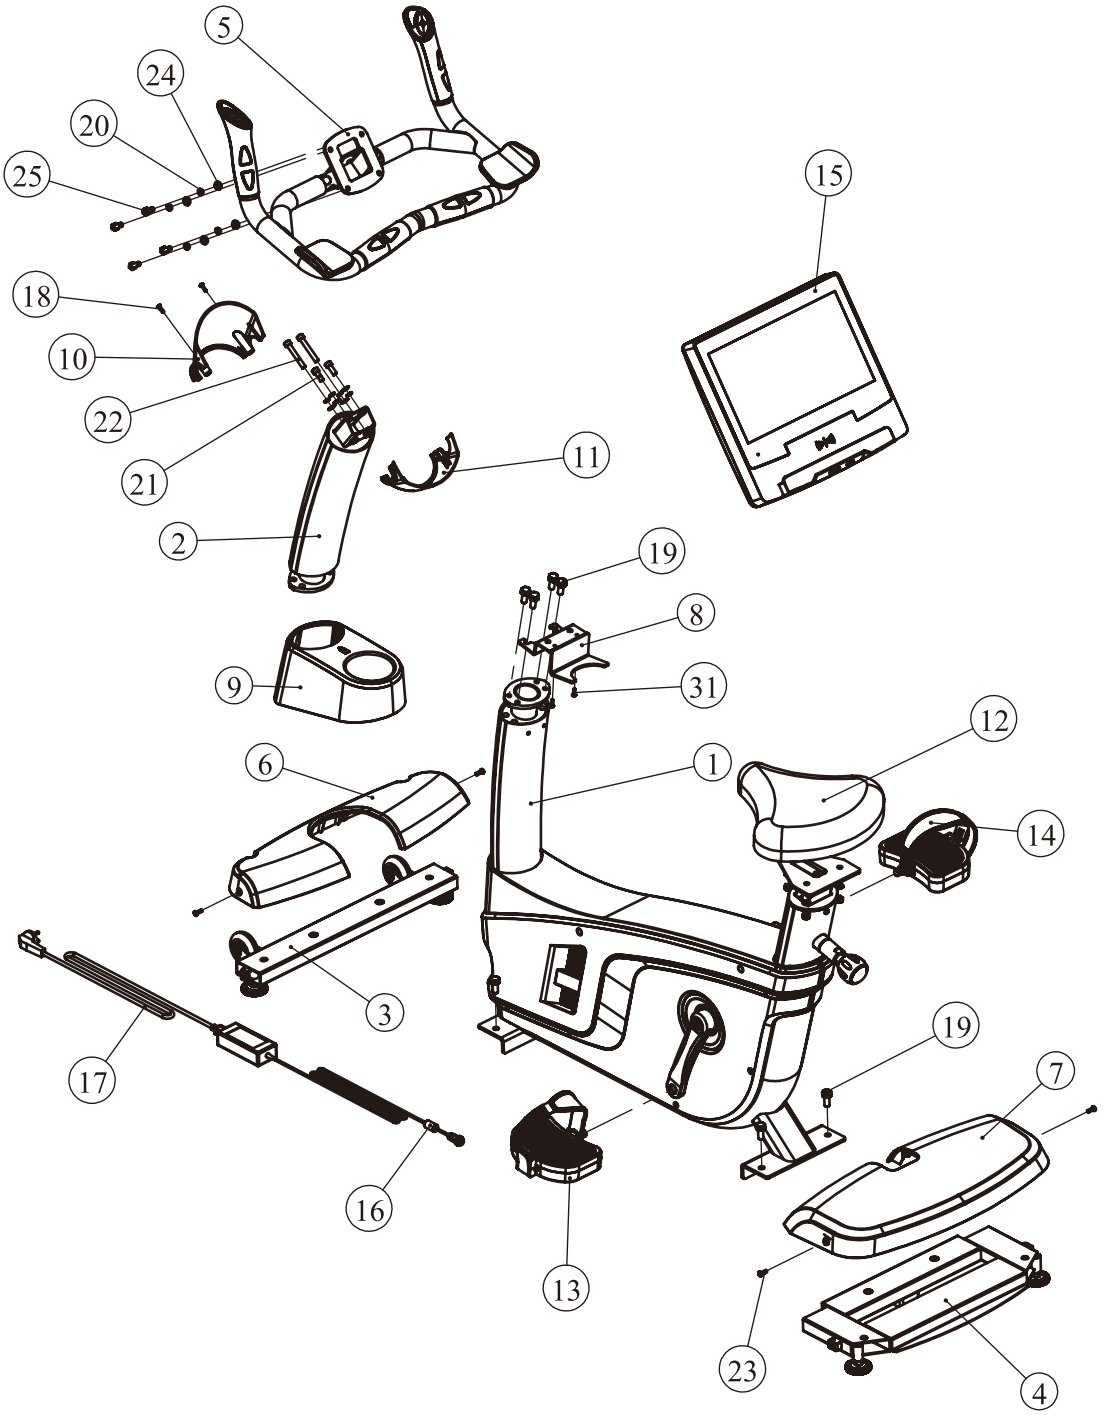

Usage And Maintenance

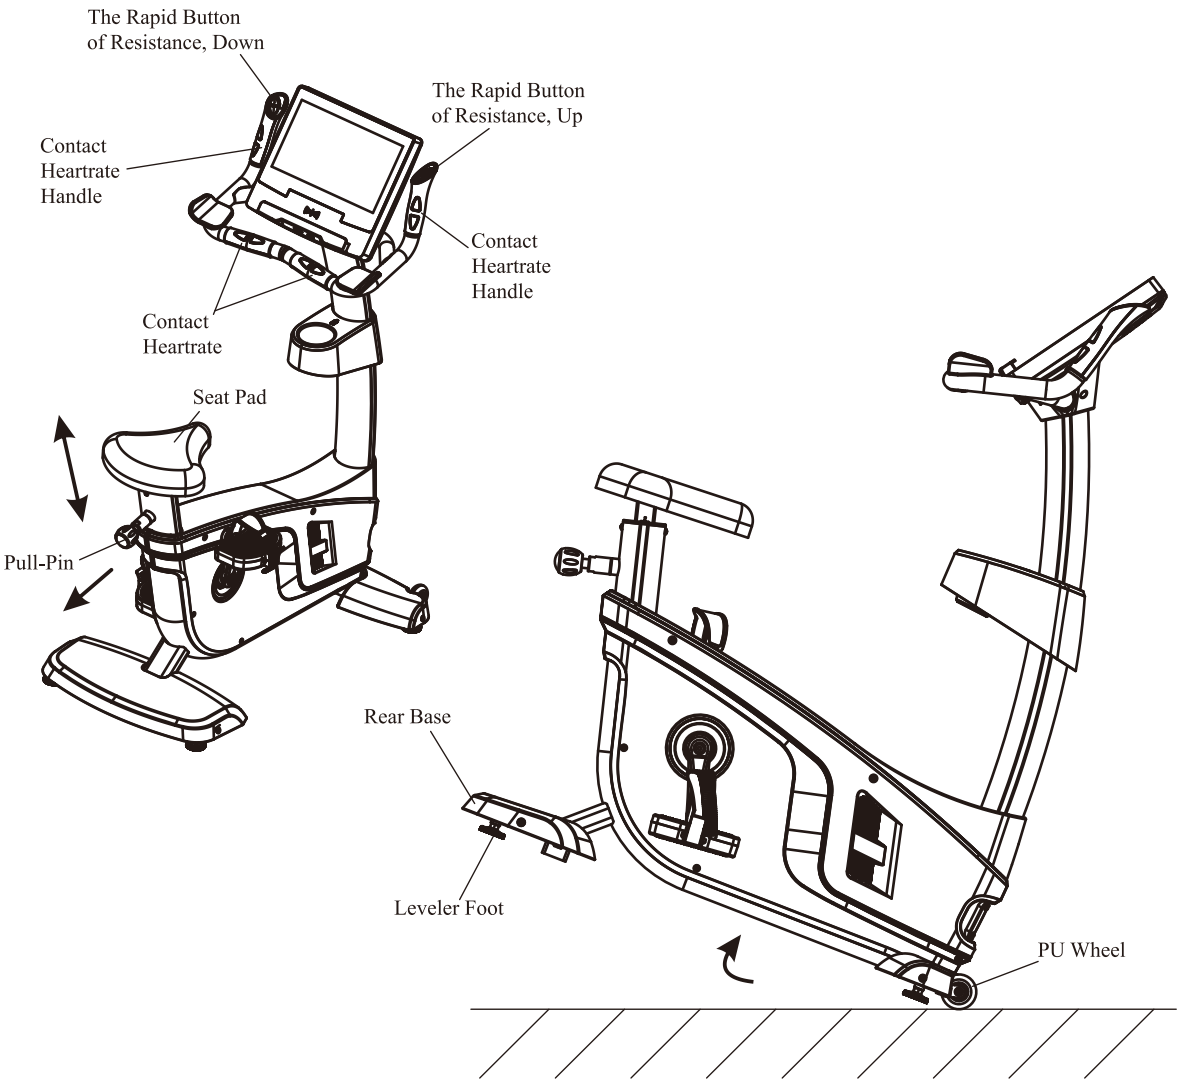

Instruction


1. When moving the machine, grasp the Rear Base, you can move it by the PU Wheel.
2. When using the machine, you must ensure it stand steadily on the ground. If it isn't steady, you must adjust the Leveler Foot.
3. You can adjust the height of the seat by the Pull-Pin.
4. When using the machine required to connect the power supply.

Maintenance

1. Tighten the pedals every 3 months.
2. If the Bolts and Screws have the trend of losing, please lock them timely.

Home Page and Button Instructions


Home page: The home page displays the following functions:

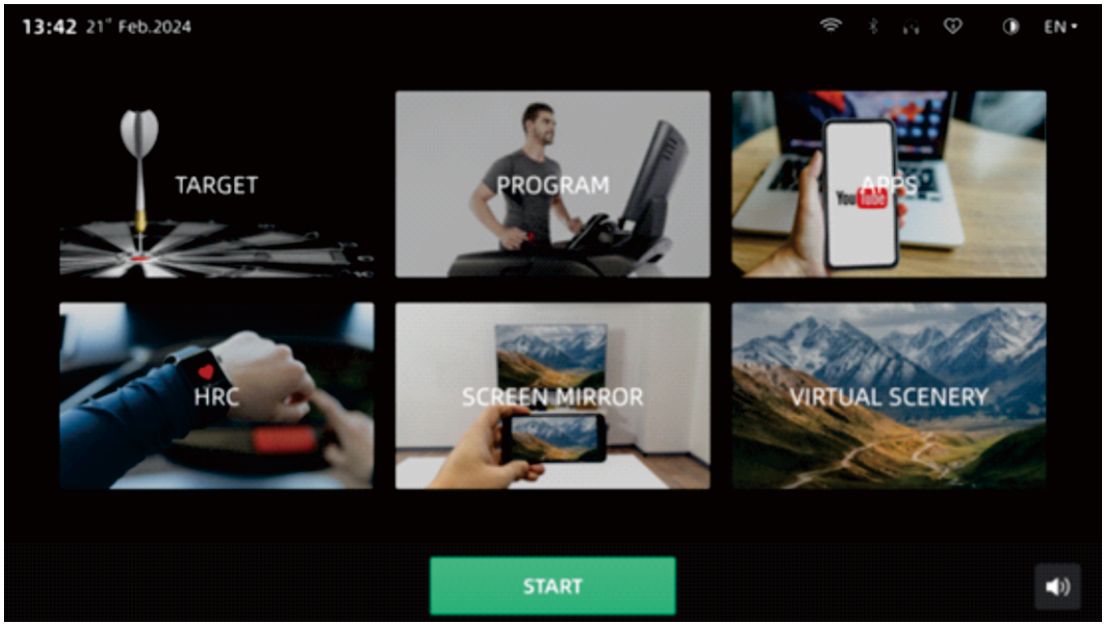


START: Press Start to start ride.
TARGET: To set ride goals based on time, distance, and calories.
PROGRAM: Workout according to four preset programs: hill, interval, cardio, and fat burning.
APPS: Online entertainment including listening to music, watching videos and surfing requires internet connection.
HRC: Set a target heart rate and move closer to it by automatically adjusting the resistance.
SCREEN MIRROR: It can be used for Android and Apple screen casting. **VIRTUAL SCENERY:** Users can choose to run in different scenarios. **SETTINGS:** System related settings, including internet, Bluetooth, general settings, device information and language, etc.

Target


Press "TARGET" on the home page and select the mode from "Time", "Distance" and "Calories". Scroll the red bar or press the +/- buttons to set age, weight and ride data. Press the Start button to begin riding. Once the user reaches the set goal, the bike will stop automatically.

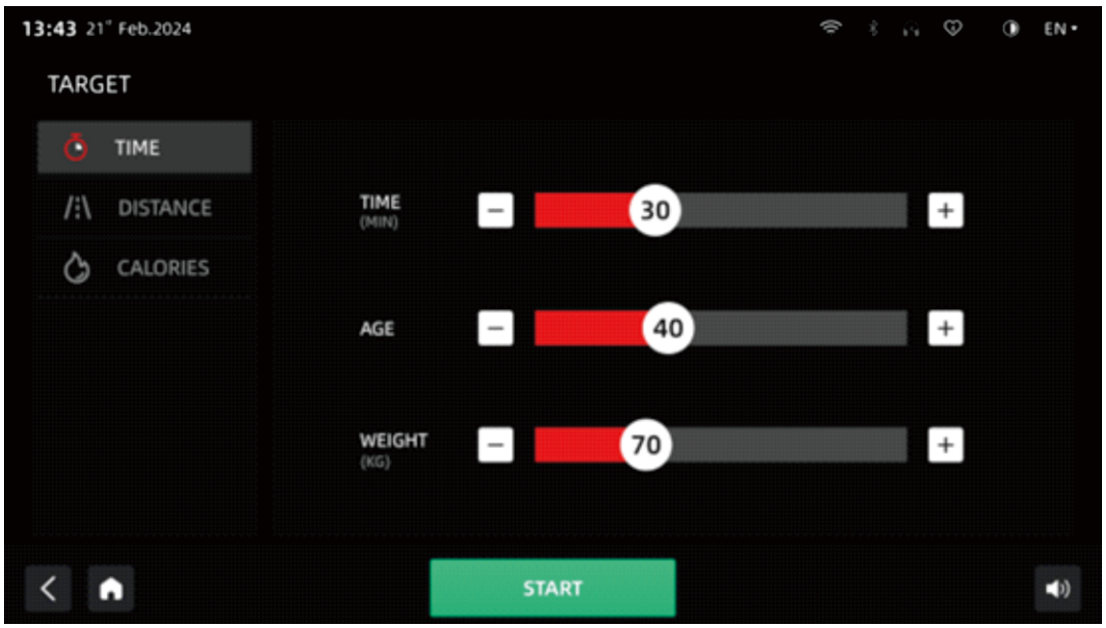

Set exercise goals based on time

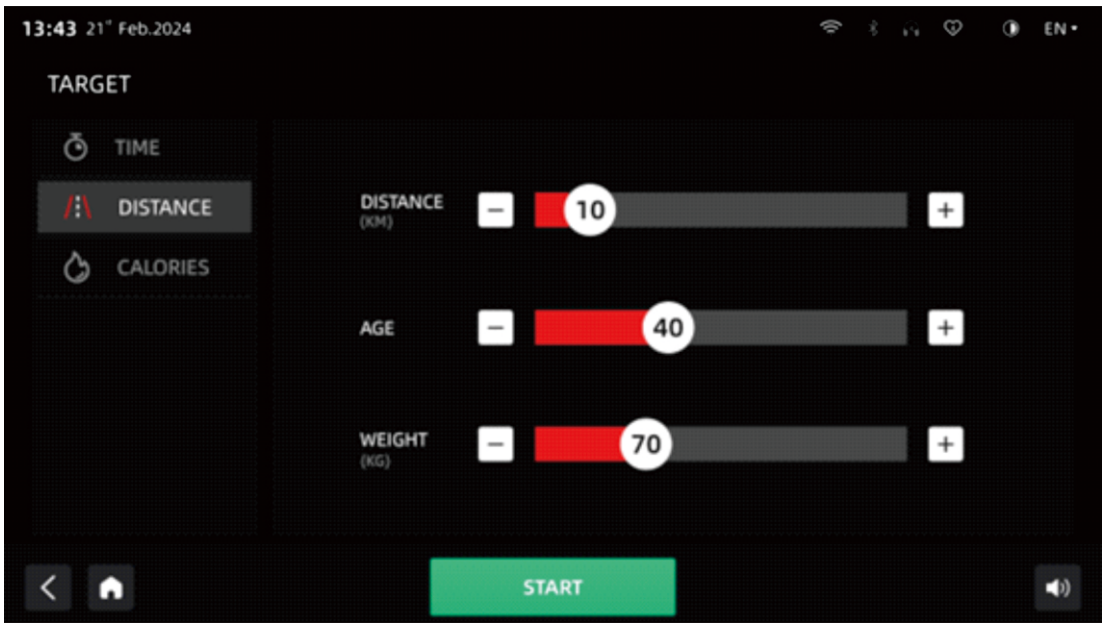


Set exercise goals based on distance

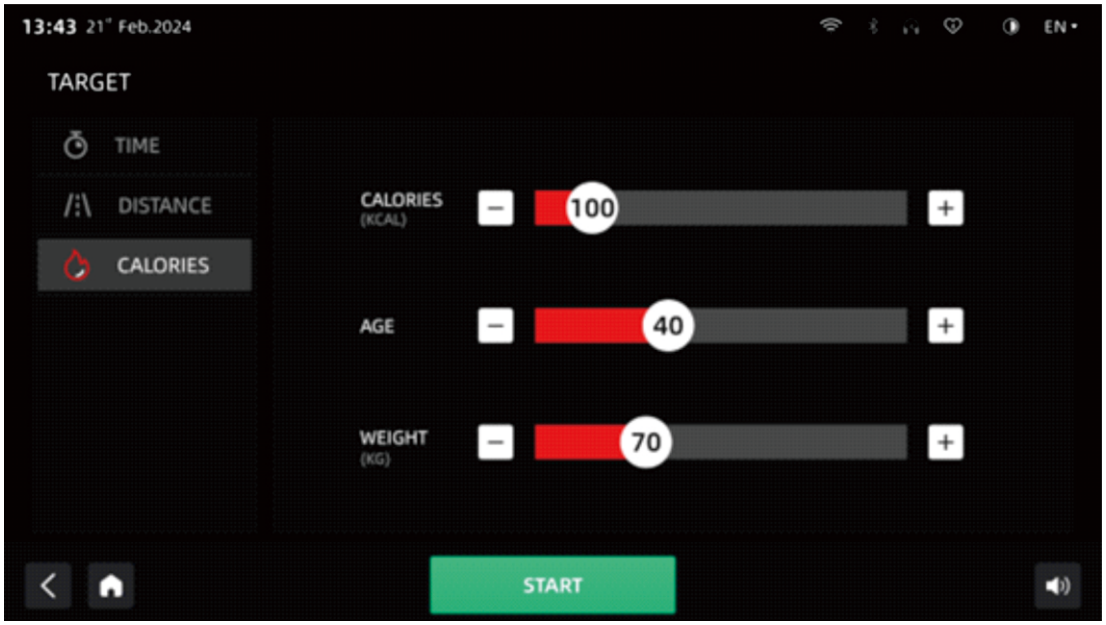

Set exercise goals based on calories

START


Press START on the home page to enter the Cycling page.
When pressed, the display will show a countdown of 3, 2, 1 and GO. When the sound ends, the bike will enter the riding phase.

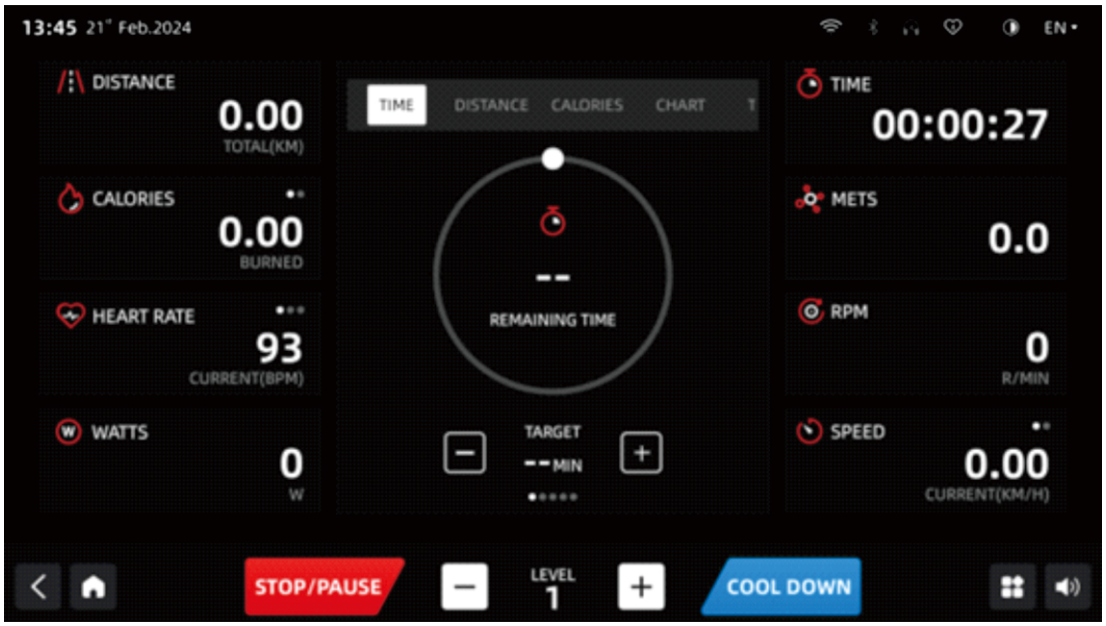

ride page

Resistances


While the bike is ride, you can adjust the resistance by pressing the up and down icons directly below the screen, which can be set with a single click.

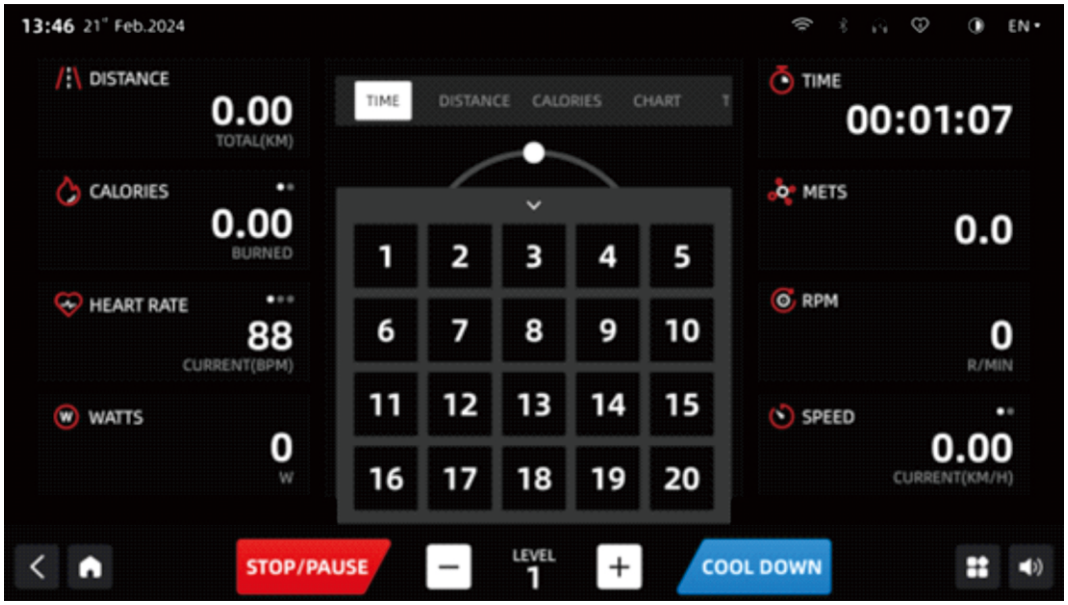

resistances

Cool Down


Entering the ride page, press COOL DOWN to cool down. This program will have the speed and display a countdown of three minutes. The relaxation time of three minutes is not included in the exercise report.

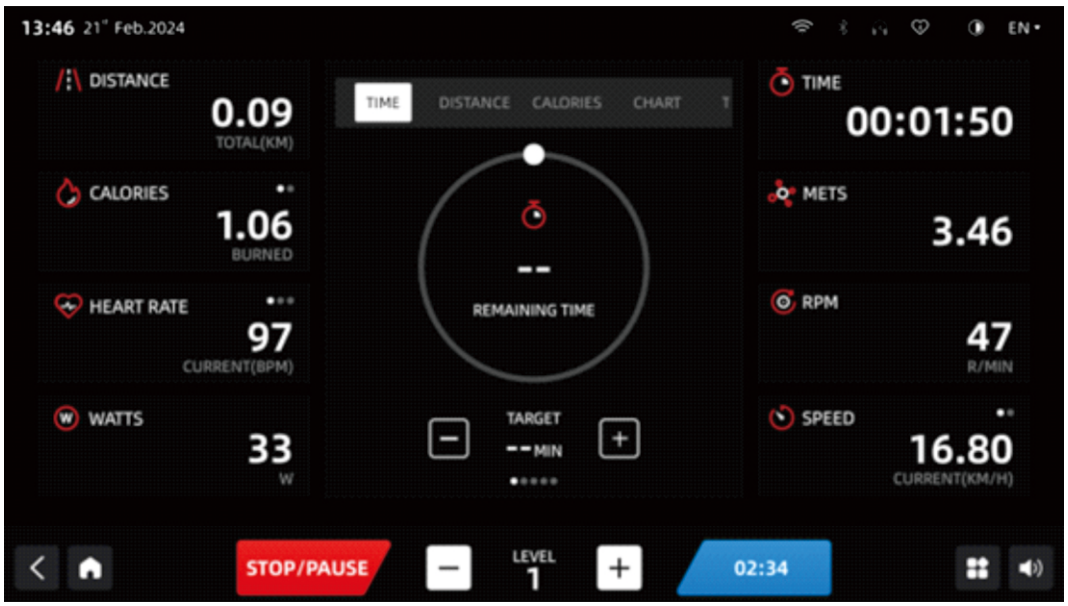


Cool down

STOP

Enter the ride page and press STOP button to stop the bike. It will end with a page displaying time, distance, and calories burned of this exercise. The data will show changes in heart rate, incline and speed. Users can press STOP button to stop the current exercise, and press RESUME button to continue this exercise.

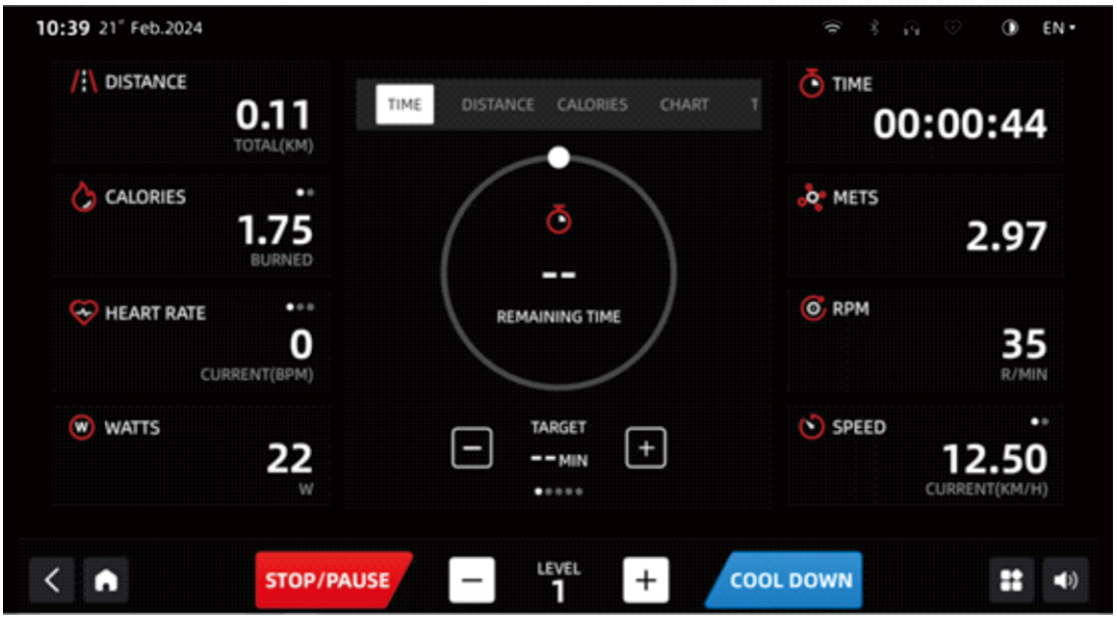


Ride page

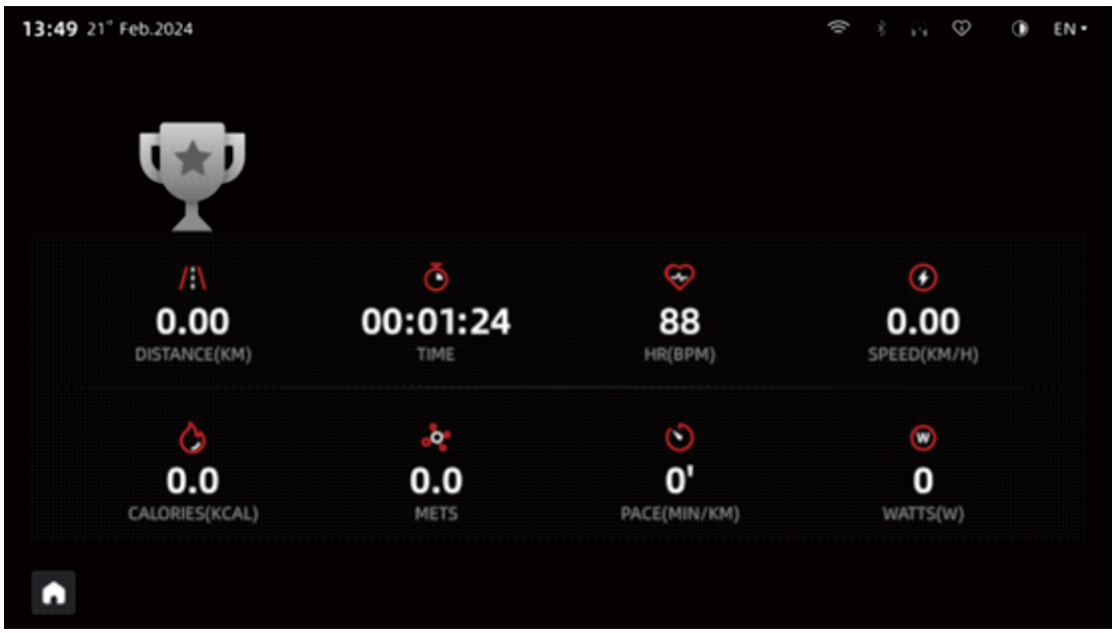


Exercise report

Other Buttons on the ride Page

"Home/Back" button: When user go back to the home page, the exercise page will also shrink to display on the home page. User can change language on the home page. You can also switch to other modes, such as HILL, and it will pop up window to hint whether to switch.

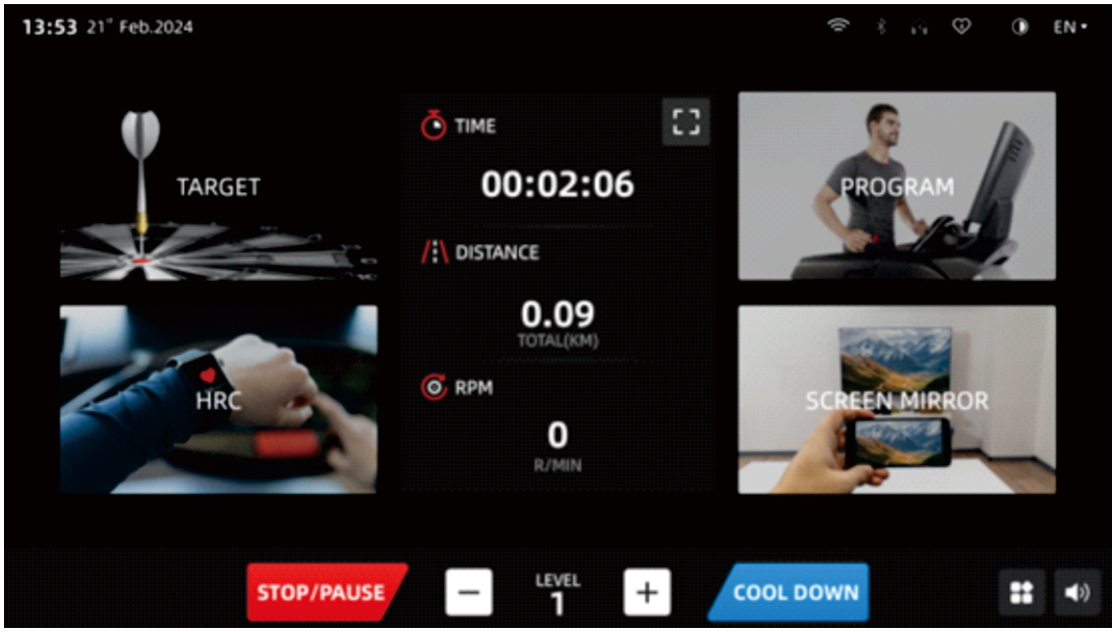


Press HOME or BACK

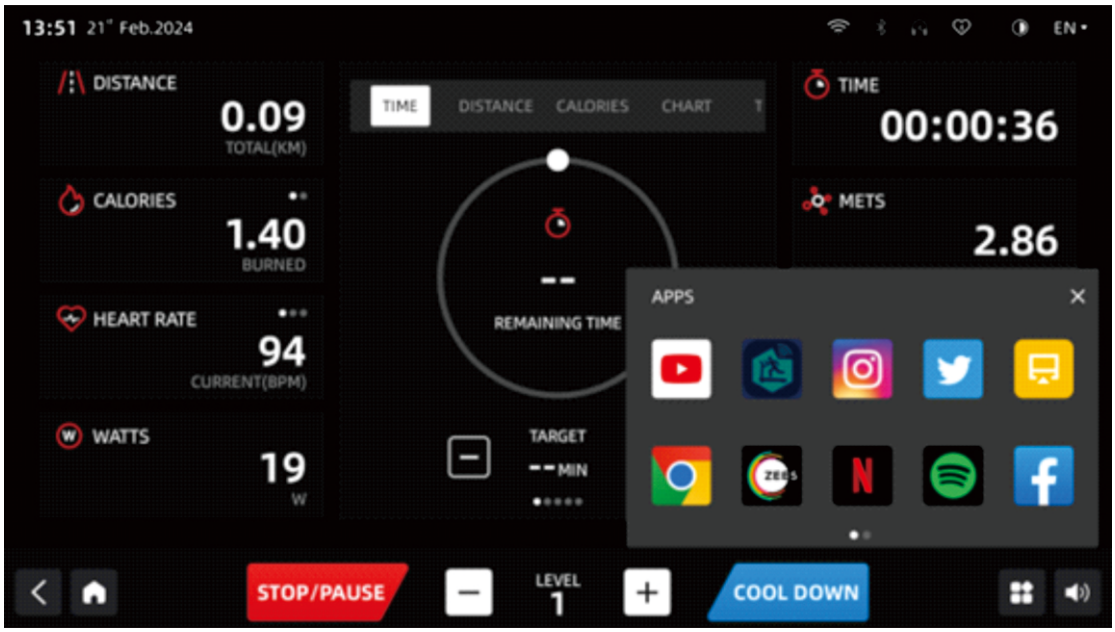


Press Entertainment icon

Volume button: Press the speaker icon to adjust the volume

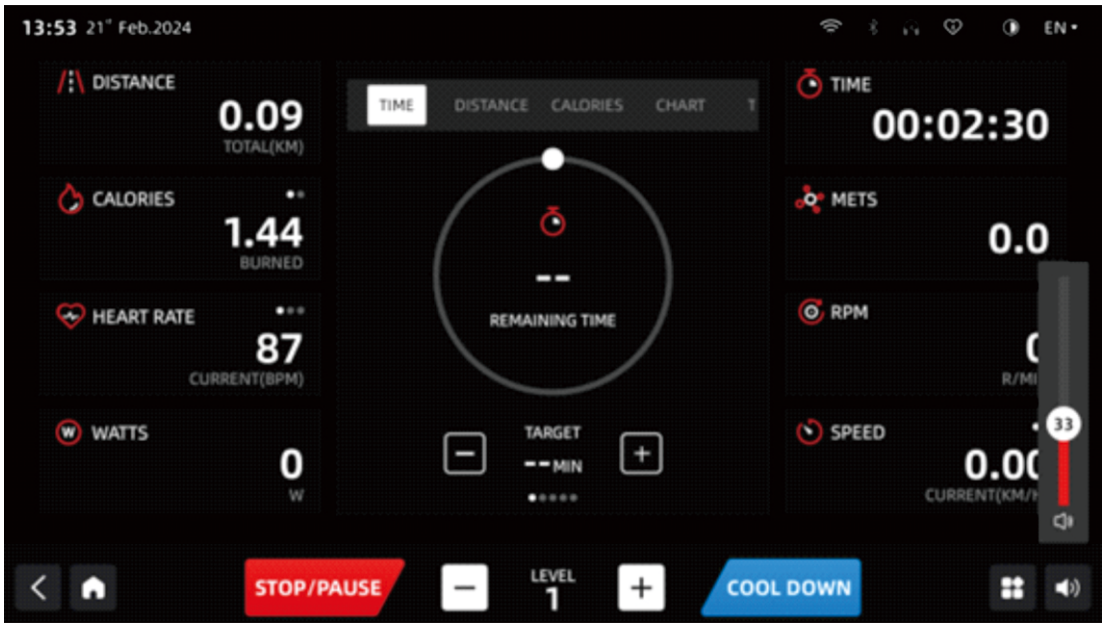


Press volume


Other control bar buttons: Press time +/- to adjust the exercise countdown time. Press distance +/- to adjust exercise distance. Press calories, set weight first, then press +/- to adjust exercise countdown calories. Press CHART to display speed/incline in icon mode. Press TRACK to display runway mode. (The bike will stop ride when it reaches the current set target (distance/time/calories)).

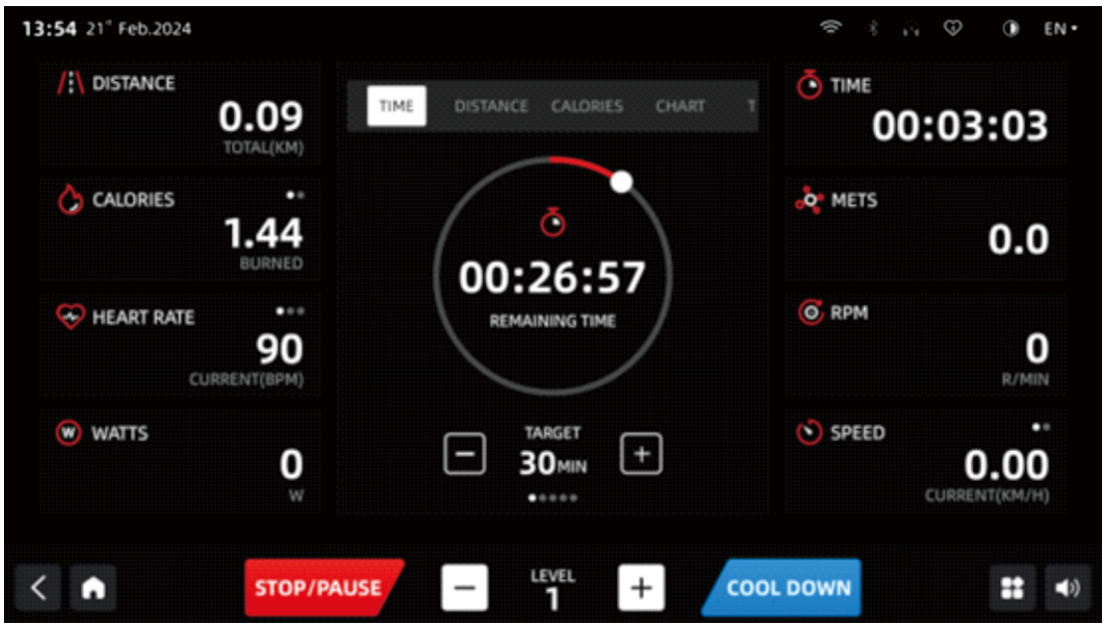

Press TIME

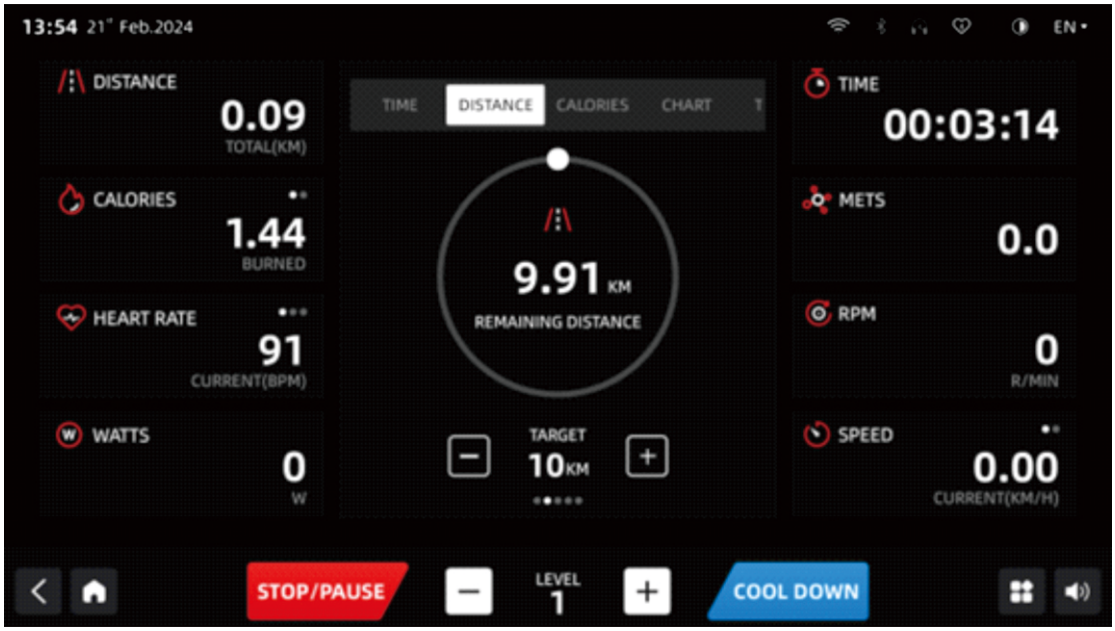


Press DISTANCE (Imperial)

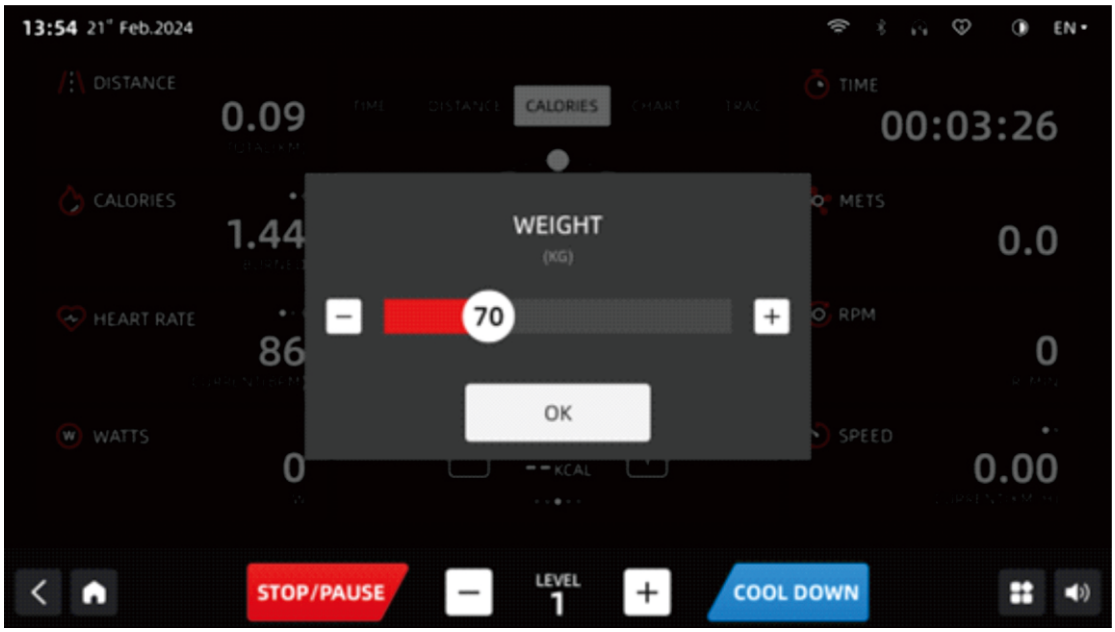


Press CALORIES (set weight)

Console Panel Functions

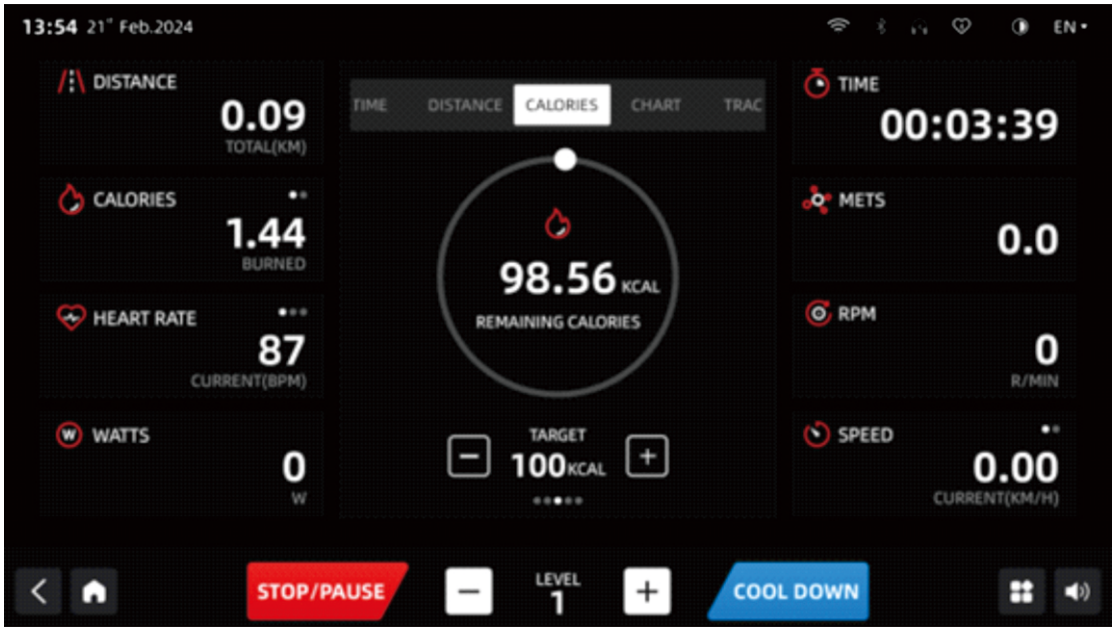


Press CALORIES

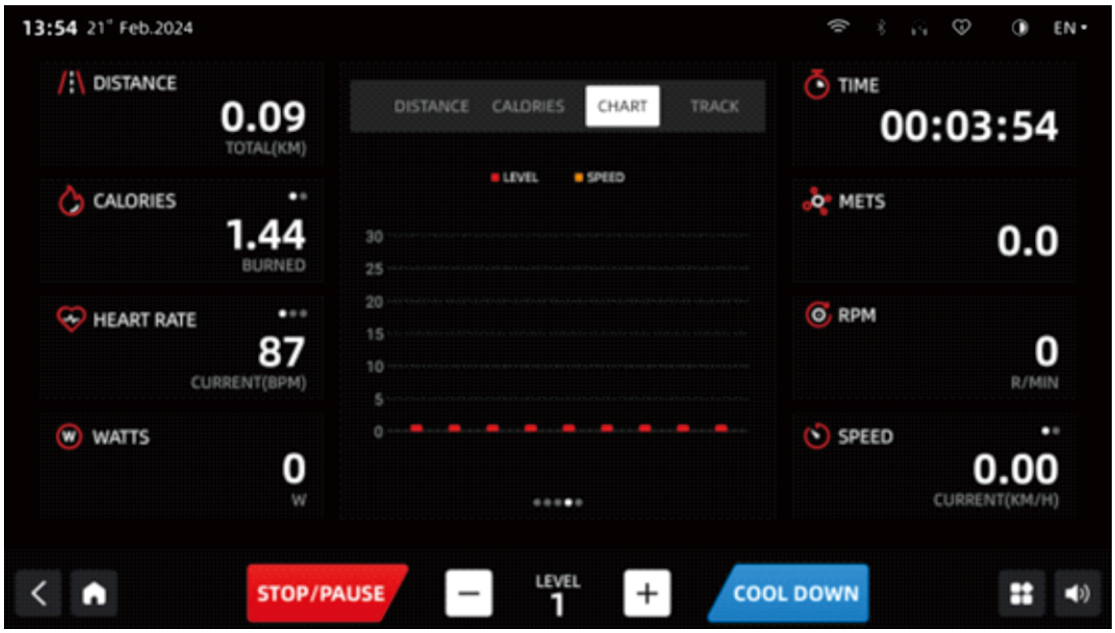


Press CHART

Console Panel Functions

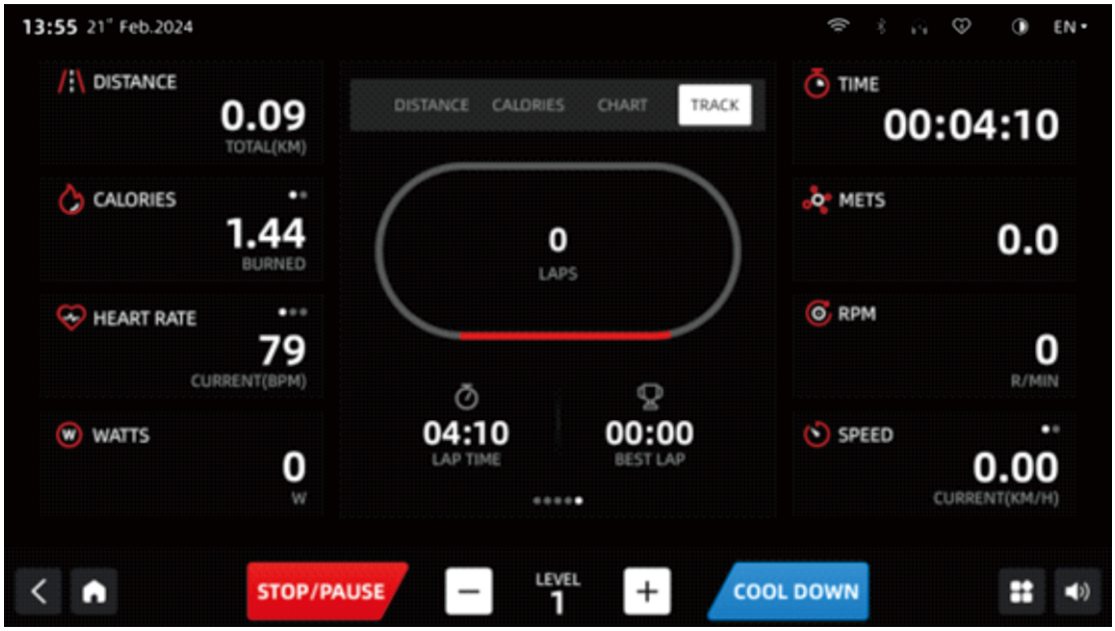

Press TRACK

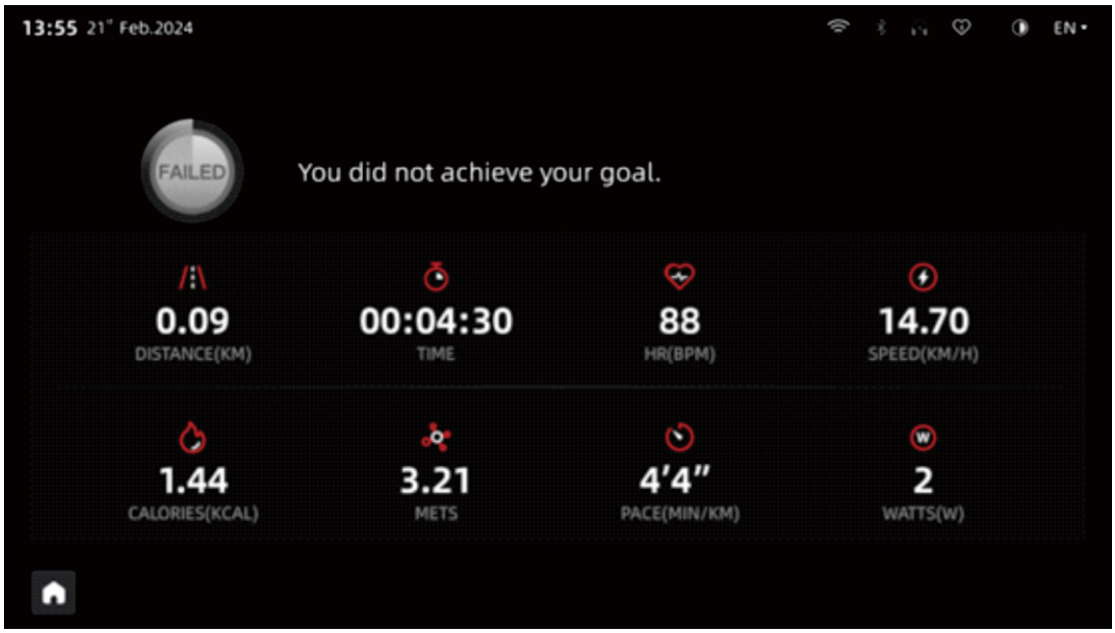

Exercise ending

Console Panel Functions



Real-time heart rate, average heart rate, maximum heart rate of this exercise,




Real-time speed of this exercise. Swipe left to display the average pace and average speed,




Real-time distance of this exercise. Swipe left to display climbed distance,



Real-time metabolic rate of this exercise,



Real-time calories this exercise burned. Swipe left to display calories/hour,




Duration of this exercise.




Displays the number of revolutions per minute

APPS

Press APPS on the home page to enter the applications interface. You need to connect to the internet to access these platforms. You can also Press "APPS" icon in the lower right corner of the ride page. Video - YouTube; Music - Spotify; Browser - Google Chrome; GymTrakr, Instagram, Twitter, Screen Mirror, ZEE5, Netflix, Facebook and so on.

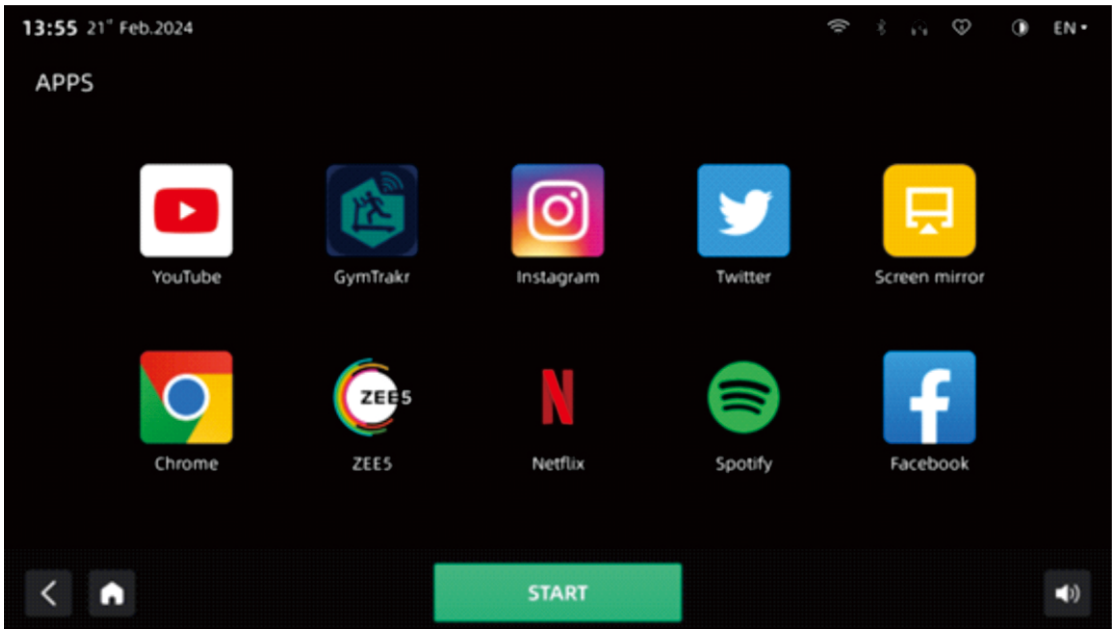

Console Panel Functions

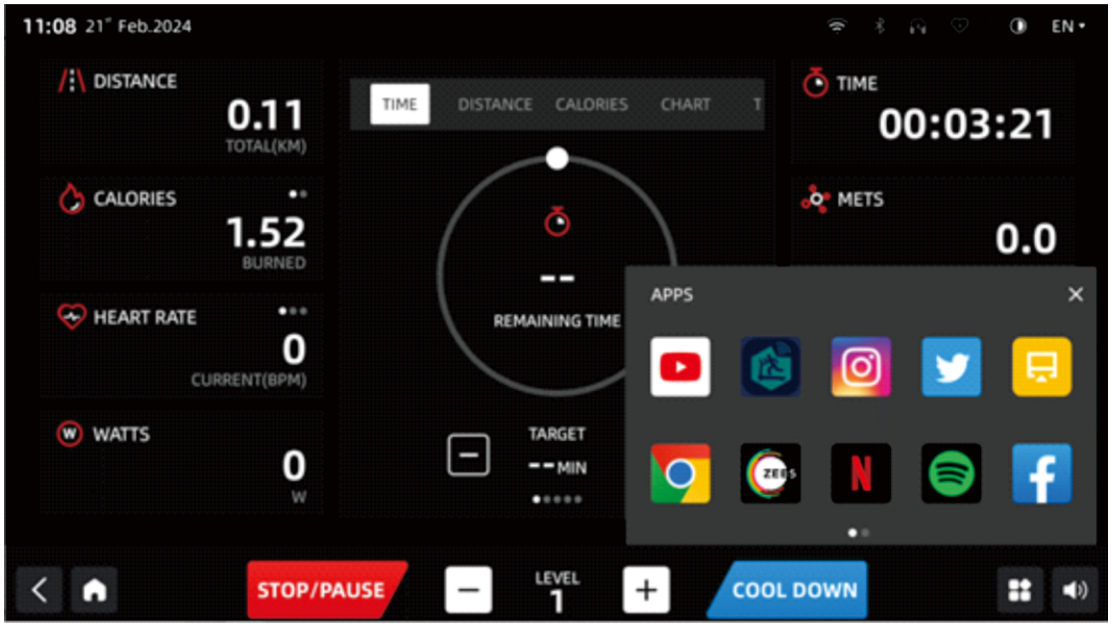

Entertainment page - internet connected

If you want to display the ride page in full screen, press the white " ⛶ " button to hide the control bar. Press here again and the control bar will appear.



Virtual Scenery

Press Virtual Scenery on the home page to enter the virtual scenery interface. Virtual scenery is the process of simultaneously playing scenery videos during the ride process, allowing users to have an immersive ride feeling. Users can choose the ride scene according to their preferences. Each scene mode has a fixed ride program (adjustable).

Virtual Scenery Page

Press any scenery mode to enter the ride page.



Video mode

PROGRAMS


Press "Program" to enter the program ride page. The system is preset with four exercise modes: HILL, INTERVAL, CARDIO, and FAT BURN.



Program mode

Pre-set Programs:

After selection, you can view detailed exercise data, including time, distance, calories burned, and resistance at different time periods of this exercise.

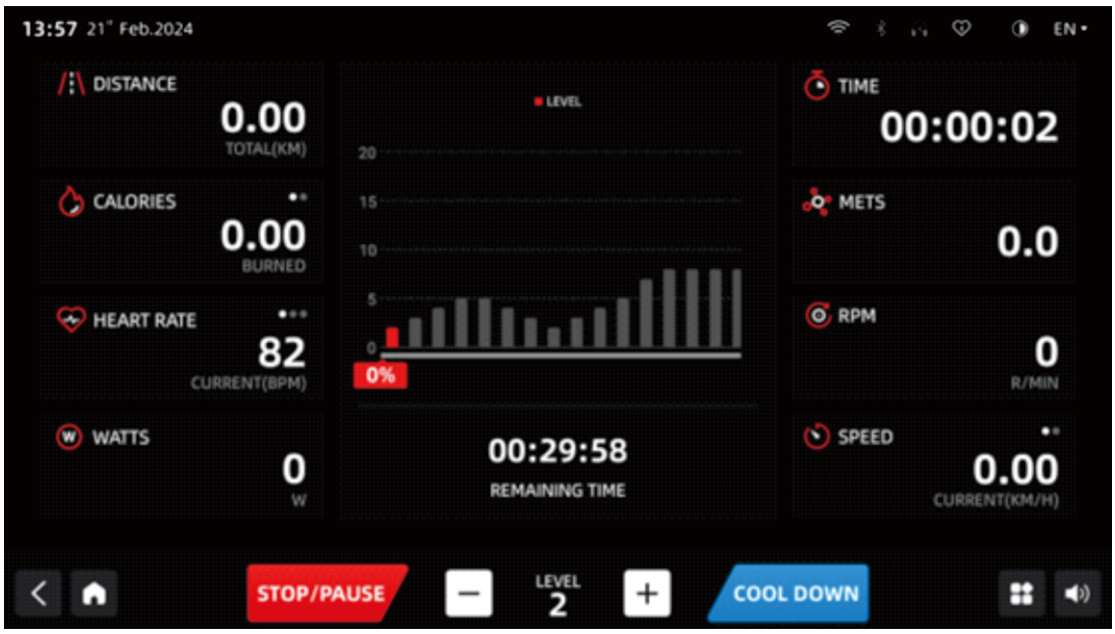

Pre-set program

Custom Interval:

1. Press Interval to adjust the interval time, maximum/minimum speed, age and weight. According to personal exercise habits, you can choose exercise time and resistances to set up an exercise program, which can be composed of multiple exercise segments.
2. Press the Start button to start ride directly.



Custom interval

HRC

Click HRC, heart rate is divided into two modes, one is target heart rate one is interval heart rate.

Target heart rate - the default display value is (220 - age)*70%, users can adjust it by themselves, while the heart rate percentage is displayed as a reference value on the side.

For example: 40 years old, target heart rate = 126 (percentage 70%), heart rate is adjusted to 150 when (83%), the upper limit of adjustment is 180 BMP.


Target heart rate mode has a six-minute warm-up, with the program officially entering after six minutes.

Interval heart rate has a six-minute warm-up, with the first minute of the official start of the transition period.


(1) The user's heart rate is not detected at the start: the resistance remain at the current settings until the heart rate is monitored or the workout is complete.

(2) TARGET HR-3 ≤ user's heart rate ≤ TARGET HR+3: resistance remain unchanged , and move to the next exercise point.

(3) User's heart rate < TARGET HR -3: resistance increases by 1 every 20s until the heart rate condition is met or the machine runs at maximum resistance.
(4) The user's heart rate > TARGET HR +3: the resistance decreases by 1 every 20s until the heart rate condition is met or the machine runs at minimum resistance.
(5) If no heart rate is detected within 15 seconds, a pop-up window prompts "NO HR detected, Please use the contact HR grips or HR STRAP" with a beep.

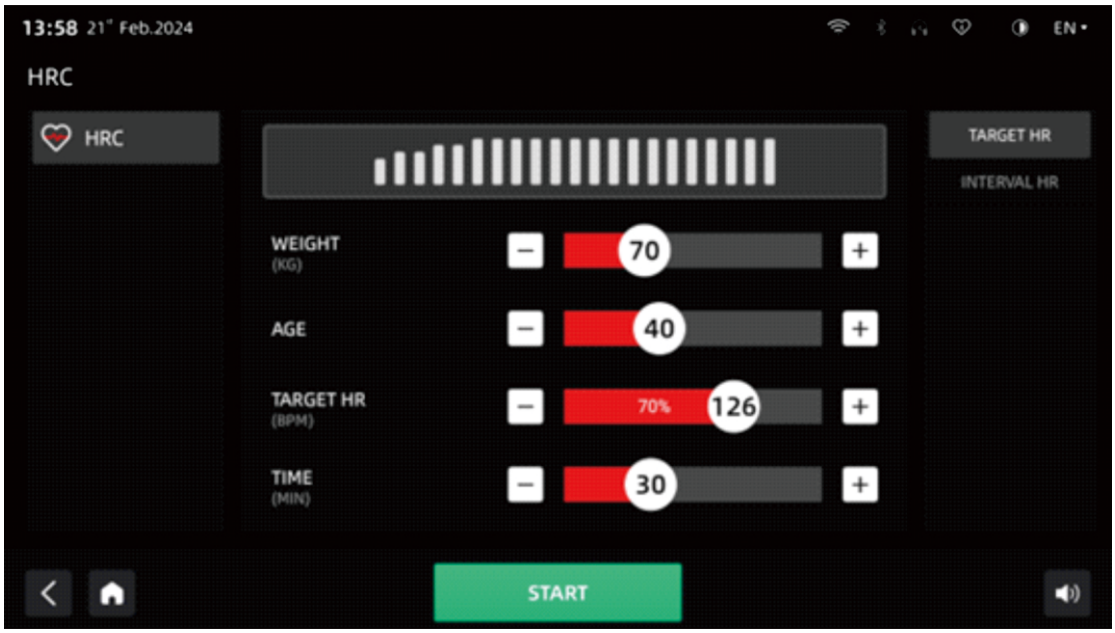

Target heart rate page

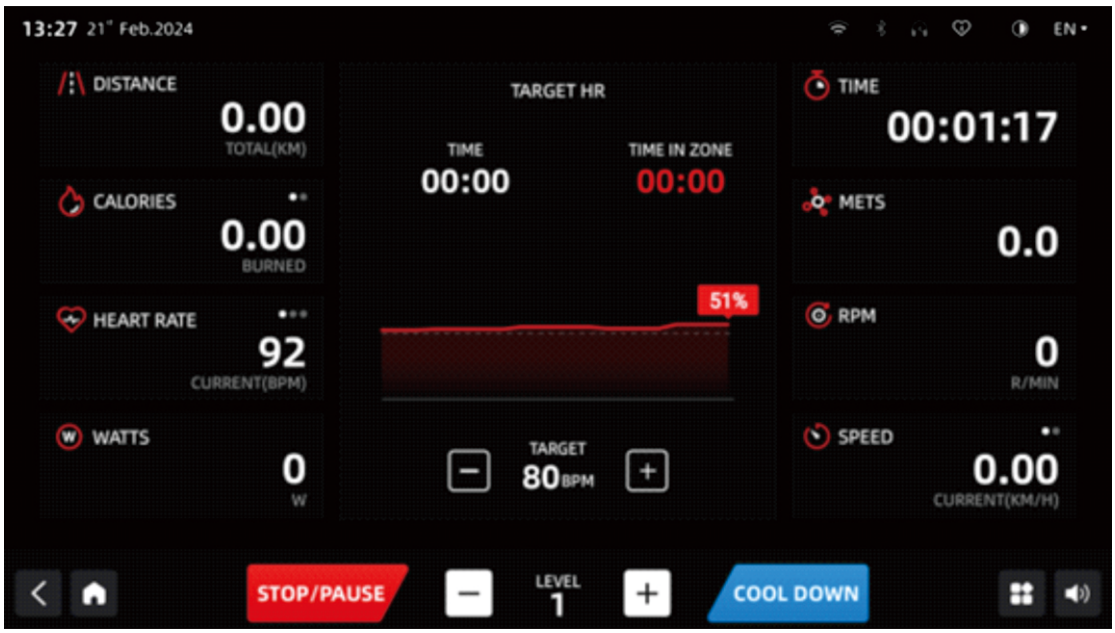


Heart Rate Riding Interface




INTERVAL HR

Screen Mirror

Press Screen Mirror on the home page. The left side of the screen mirror page displays Android screen mirroring and the mirroring code, while the right side displays Apple screen mirroring and the mirroring code. For example, press the screen mirror on a Xiaomi phone, search for the Android screen mirroring code, press connected, then a connection message will appear on the screen indicating whether to accept it. Press accept to cast the screen. (The chat window on the phone will not be displayed on the treadmill screen)
Apple screen mirror: First connect to the WiFi displayed with the password 12341234, and then press the screen mirror on Apple's phone to enable Apple screen mirror.

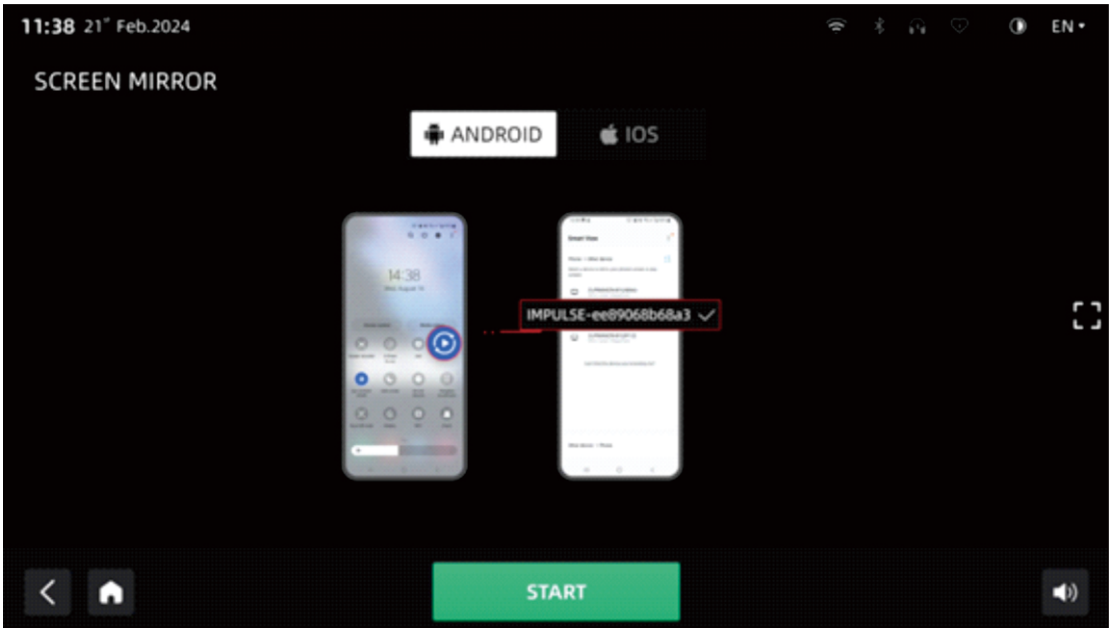


Screen Mirror page

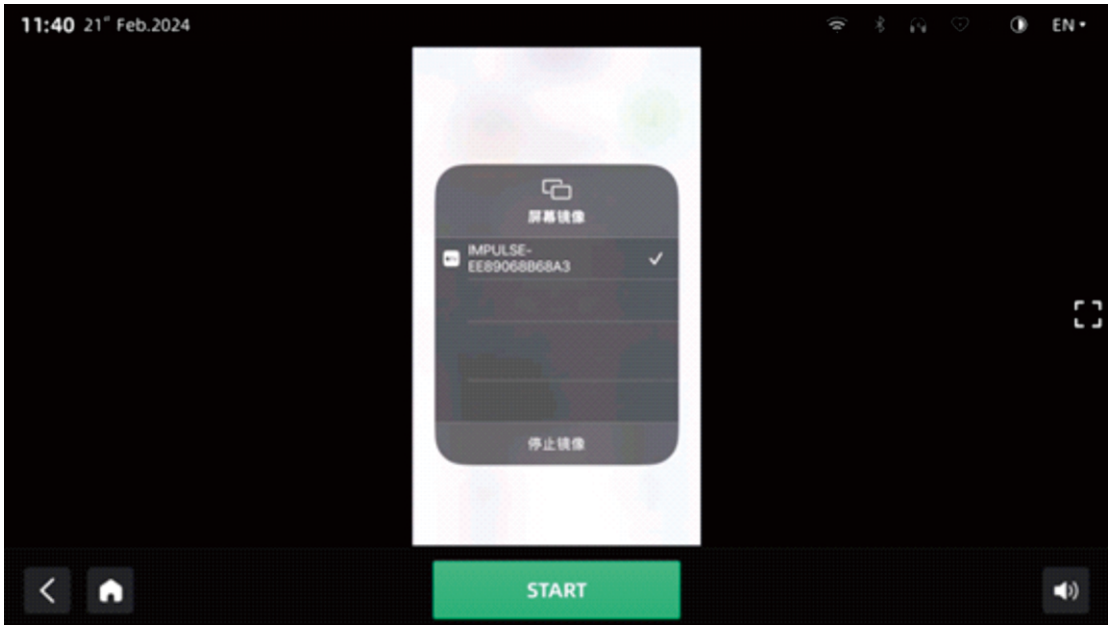

Apple screen mirror

WiFi Settings

Press WiFi to display a WiFi pop-up window, open WiFi; it will display the available WiFi. Press the WiFi that needs to be connected, a pop-up window will appear. After entering the password, the system will automatically connect to the network, and prompt that the network connection is successful. If the internet cable is connected, the WiFi icon will disappear and become the network cable icon . Press other blank spaces and the WiFi will disappear.

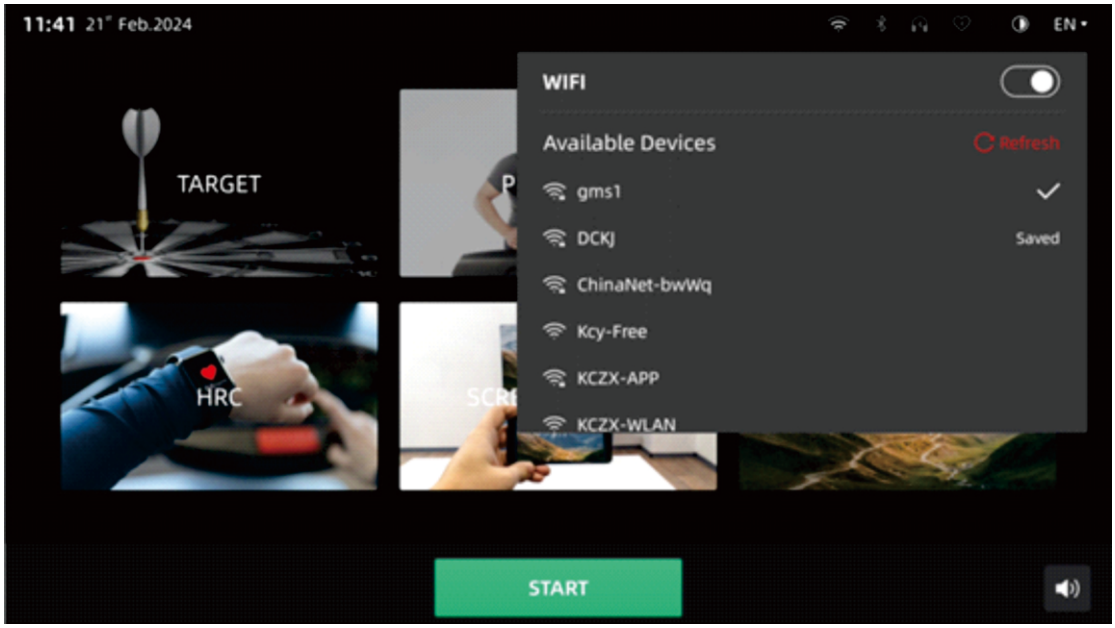


WiFi settings page


USB icon : When inserting a USB drive, the icon will be displayed. But when removing USB, it will disappear.

Bluetooth Settings

Press the Bluetooth button at the top of the screen to enter the Bluetooth settings page with one click. Press the Bluetooth switch to turn on Bluetooth; press refresh to search for nearby Bluetooth devices. Select the device you want to connect to (only Bluetooth earphones or speakers). If you press other blank spaces, the Bluetooth window will disappear.

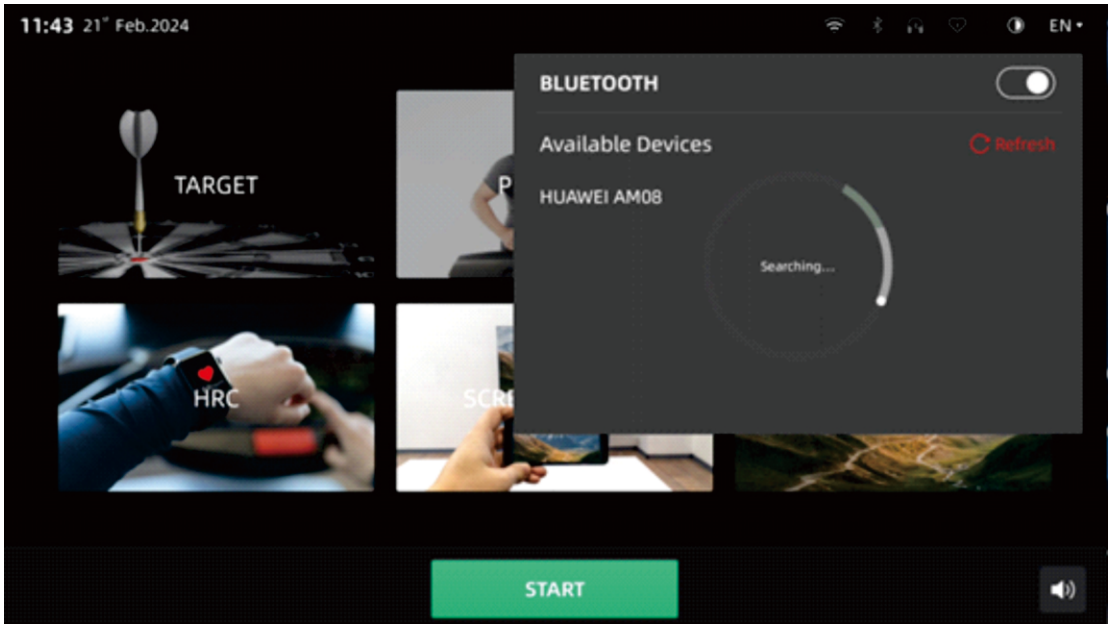

Bluetooth selection

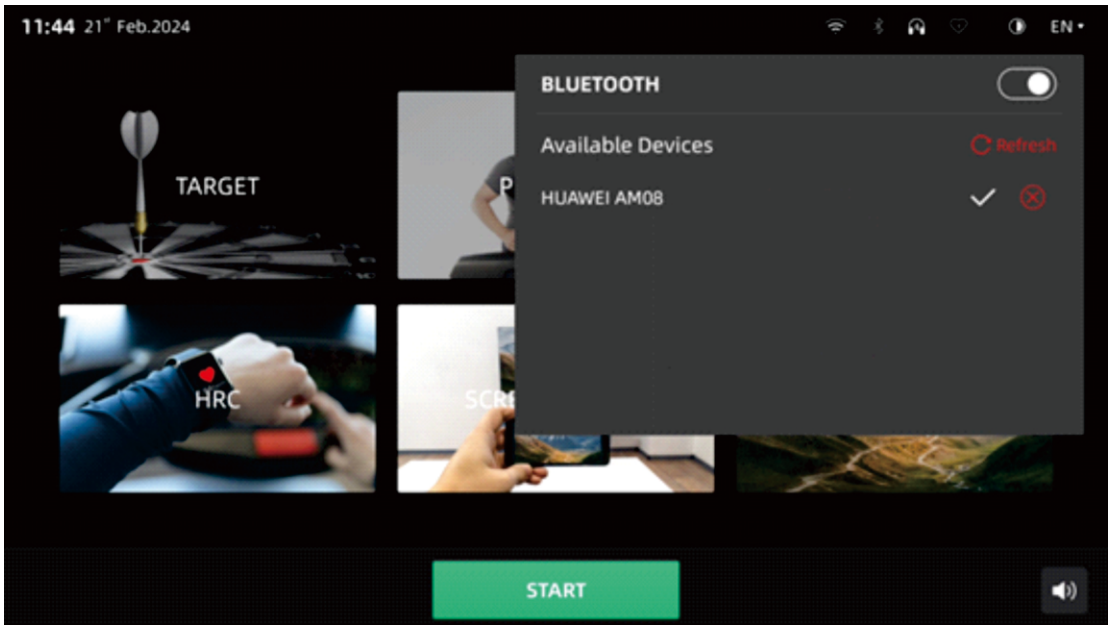


Bluetooth connected


Heart Rate Bluetooth

Press the HR Bluetooth icon at the top of the screen to enter the heart rate Bluetooth settings page with just one click. Press the HR Bluetooth switch to turn on Bluetooth, and select the device you want to connect to. (It can only be a heart rate device or Bluetooth module)

If the Bluetooth module is successfully connected, the Bluetooth Mac icon will light up and display the connected module Mac. After the Mac address is displayed, regardless of whether the Bluetooth module is connected or if it is replaced with another Bluetooth module, the Mac display will not change. Refreshing is just a decoration. After connecting once, the displayed Mac is basically fixed. Clicking on other blank places will cause the Heart Rate Bluetooth disappear.

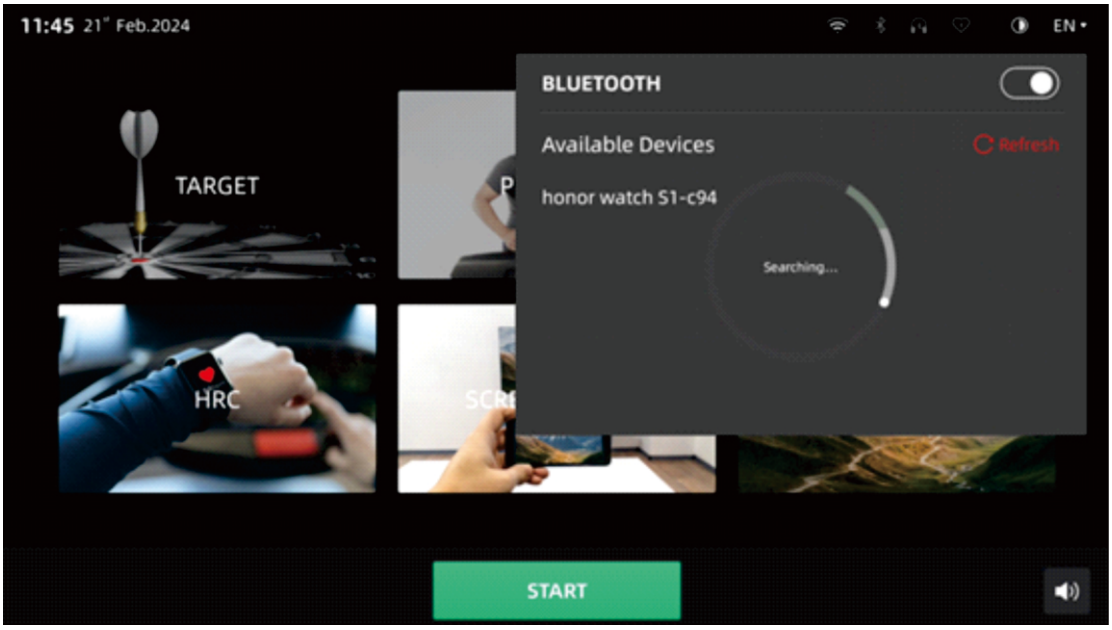


Heart Rate Bluetooth connection

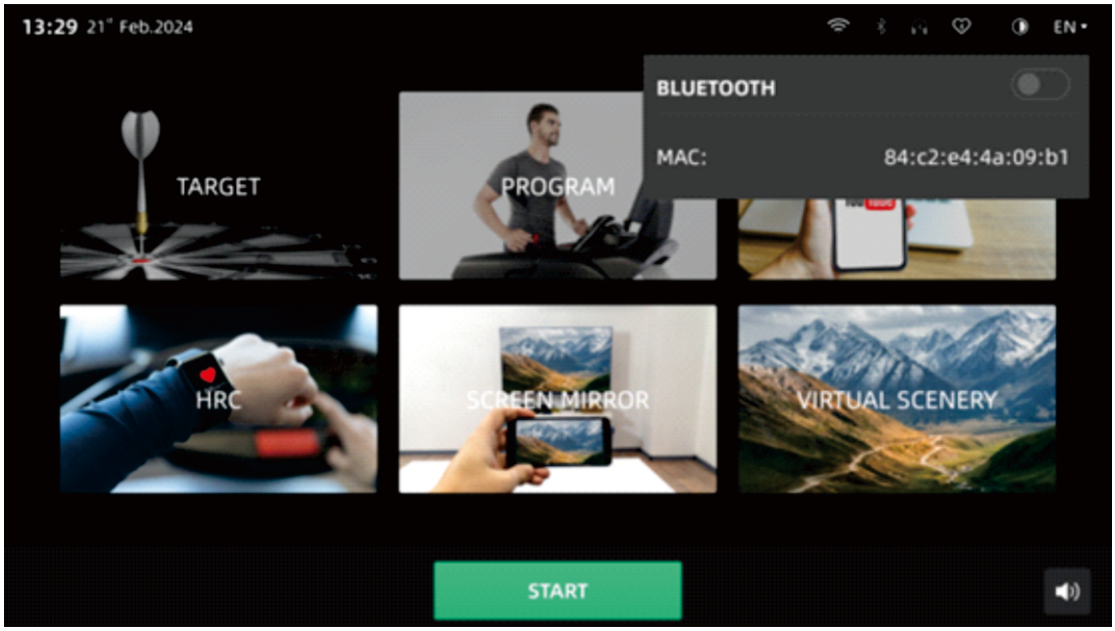

Mac icon

Volume Settings


Press speaker icon to scroll up and down to adjust the volume. If you press other blank spaces, volume adjustment will disappear.

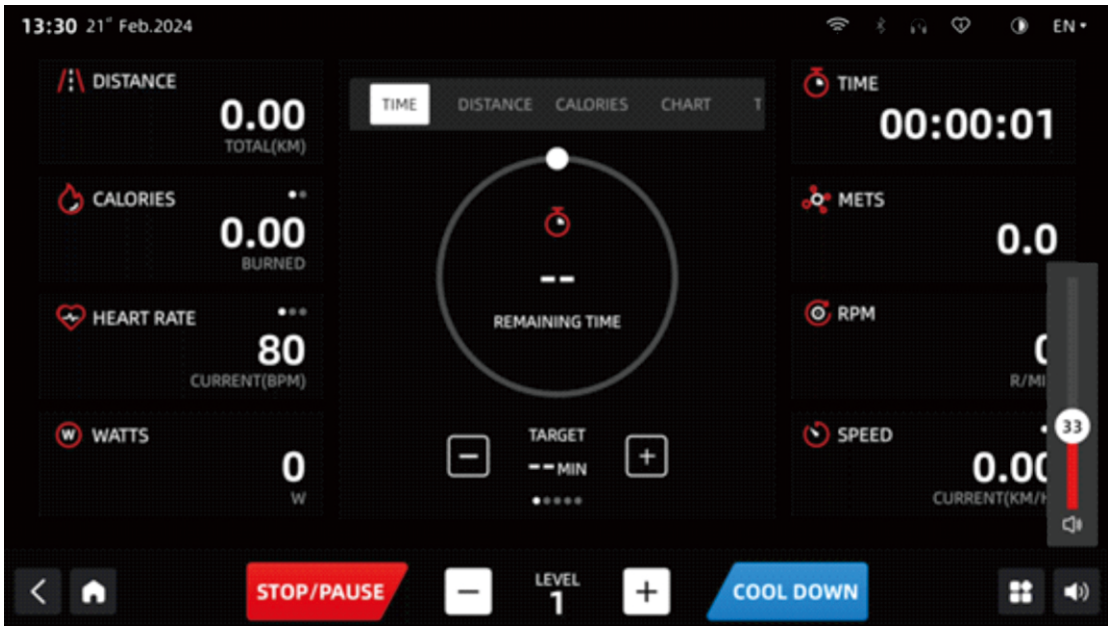

Volume adjustment

Language Switch ZH


Switch language among Chinese, English, French, German, Spanish, Portuguese, Italian, Russian, Japanese, and Korean.

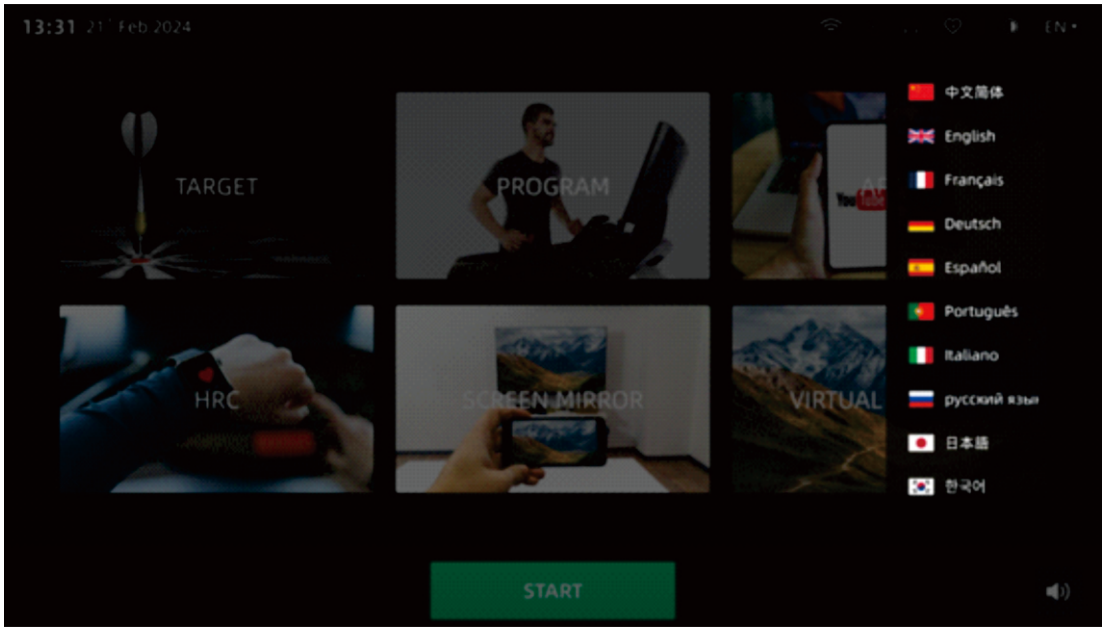

Language switch


Brightness Settings

Press the brightness icon on the homepage to scroll up and down to adjust the brightness. If you press other blank spaces, the brightness adjustment will disappear.

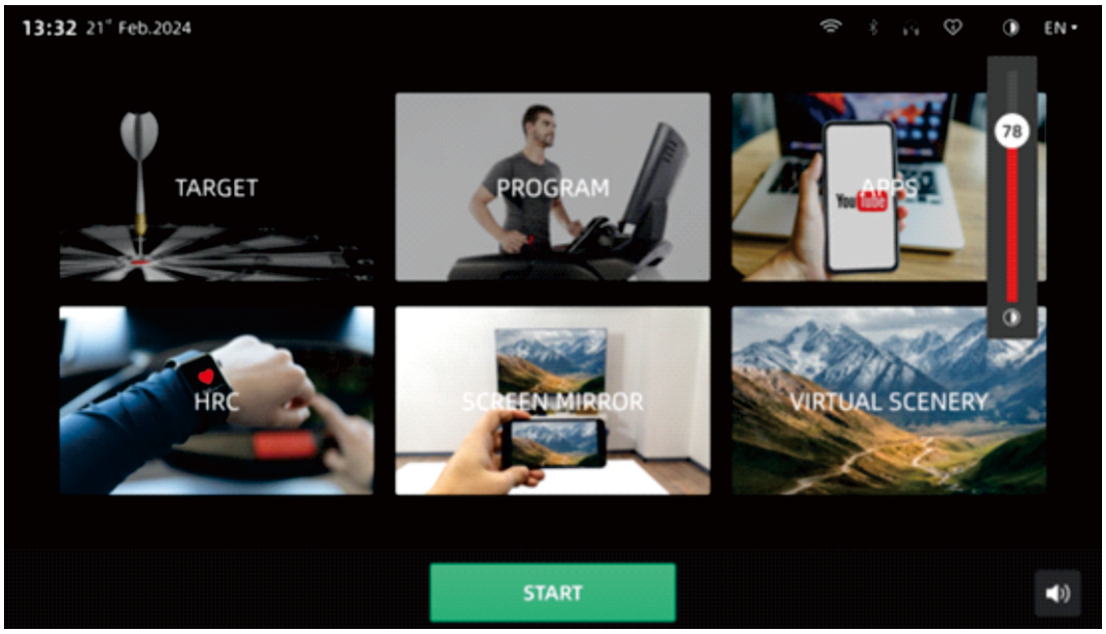


SETTINGS

Continuously pressing above the fixed program will display device information, system reset, factory settings, and software upgrade.
Equipment information: Display the product name, model, screen size, software version, and build version.

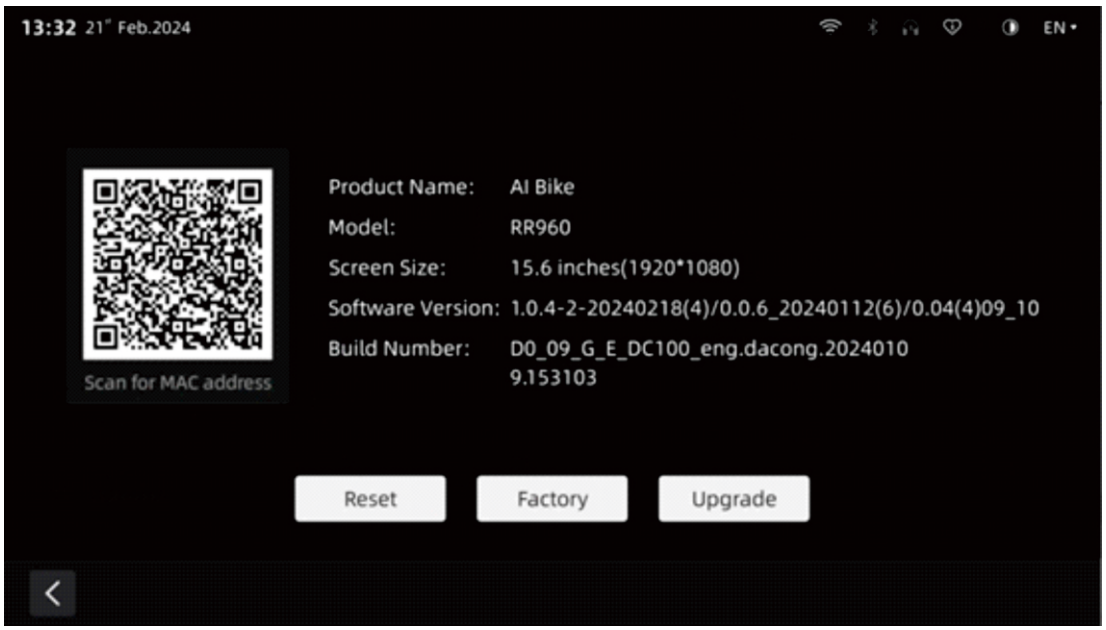

Factory settings


Press Factory and enter the password 90638818 to enter the factory settings.

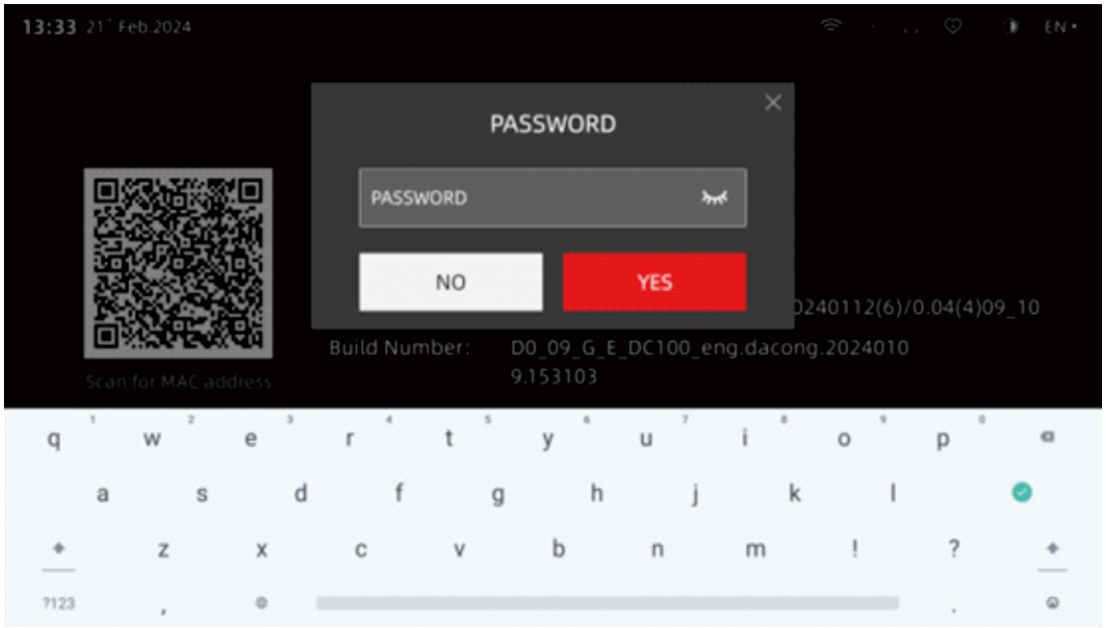

Enter password

Basic Parameters:


Units can be selected in metric or imperial systems, and device models can be RR960, RR970, RU960 or RU970.Press save finally.

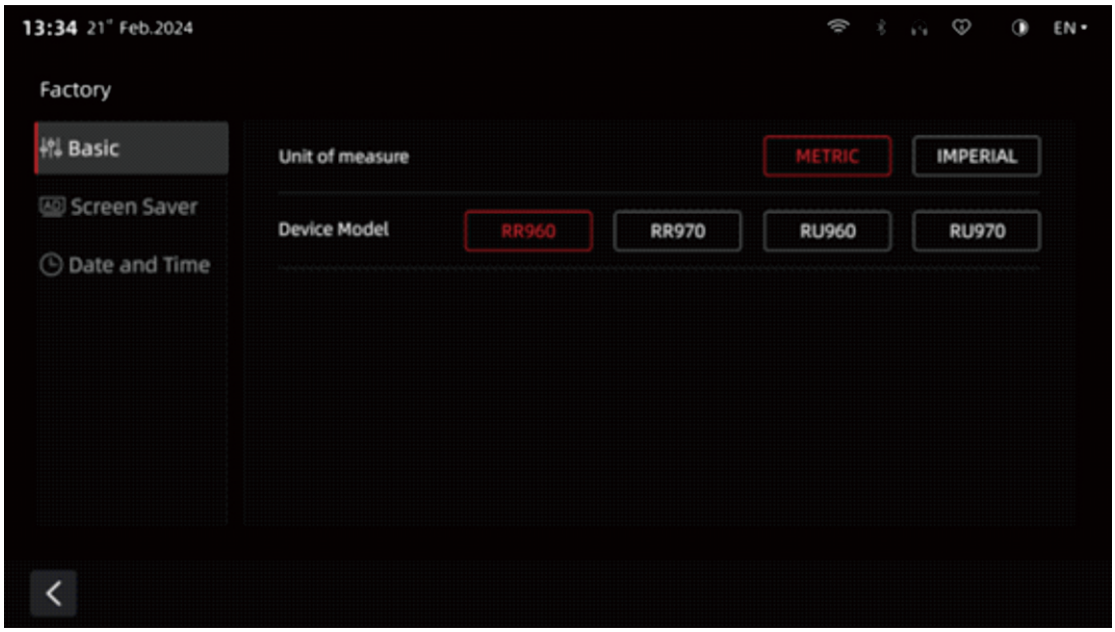

Basic parameters

Screensaver Settings:


Press screensaver settings to set the automatic screensaver advertisement time (30-60 seconds). As long as you don't press the screen, whether you are ride, browsing web pages, To import the advertisement, insert a USB drive with the advertisement path (file name is screensaver, advertisement format is jpg. or png.), then press import; and it will import successful. Press delete to delete the advertisement.

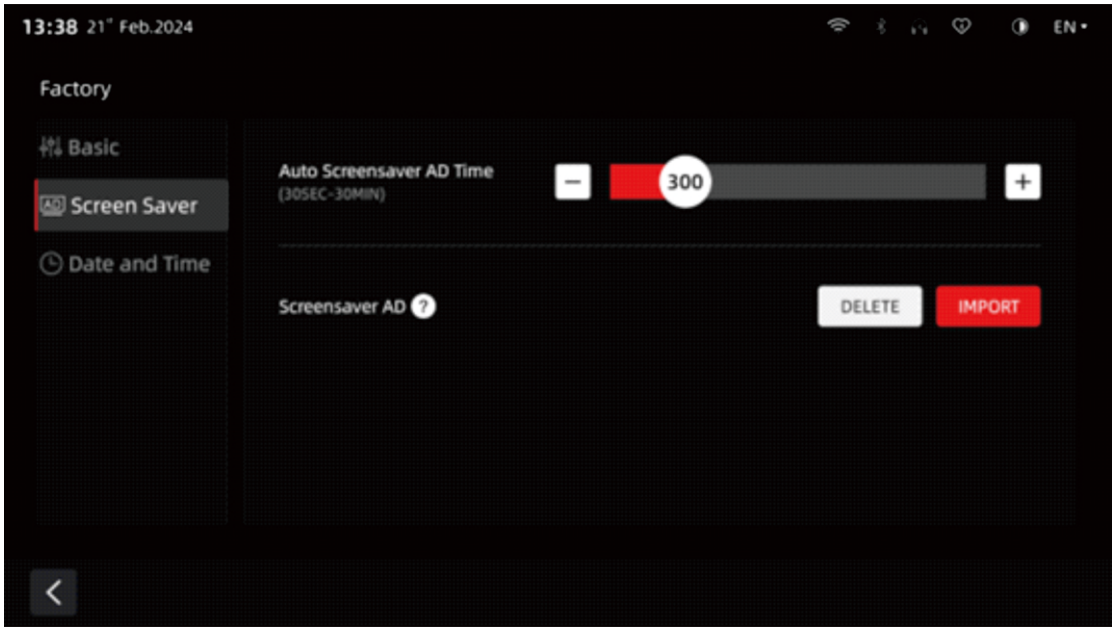


Screensaver settings

Time and Date:

Press time and date to choose whether to automatically set the time (internet connection is required). Press Select Time Zone to select the time zone needed.

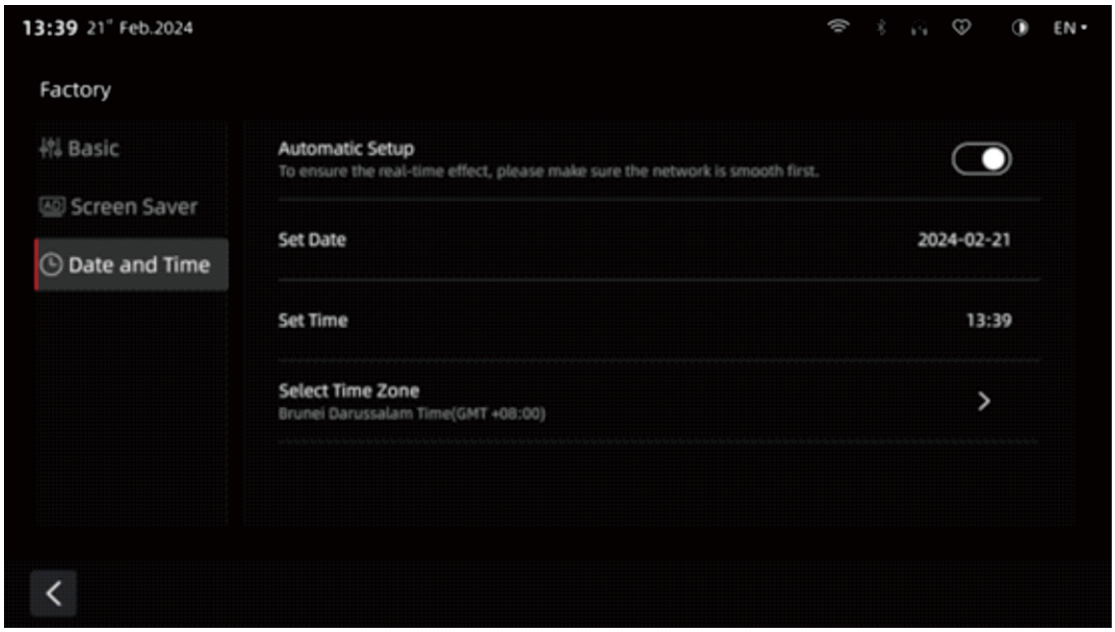


Time and date

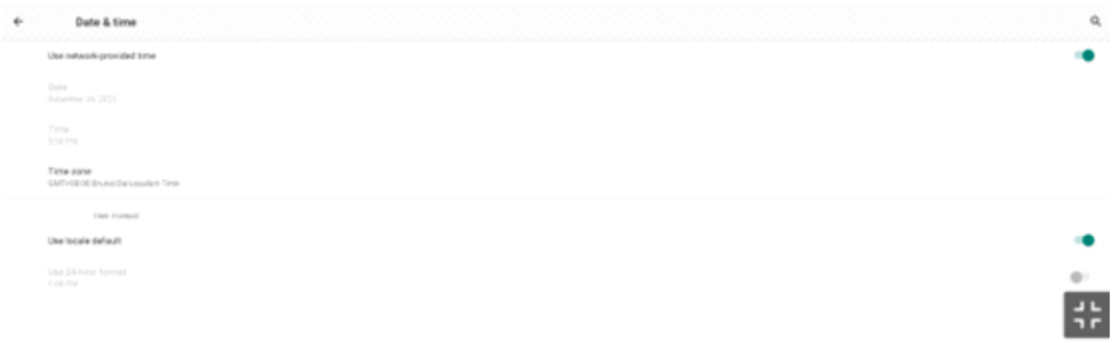

Select time zone

Software Upgrade


Press software upgrade and enter password 90638818 to enter the software upgrade page. This page will display name, current version, server version and operation. If there is a new version, the operation will display upgrade. To upgrade with the USB drive, insert a USB drive with an upgrade path (file name dc_settings), press upgrade; and the upgrade will display successfully.

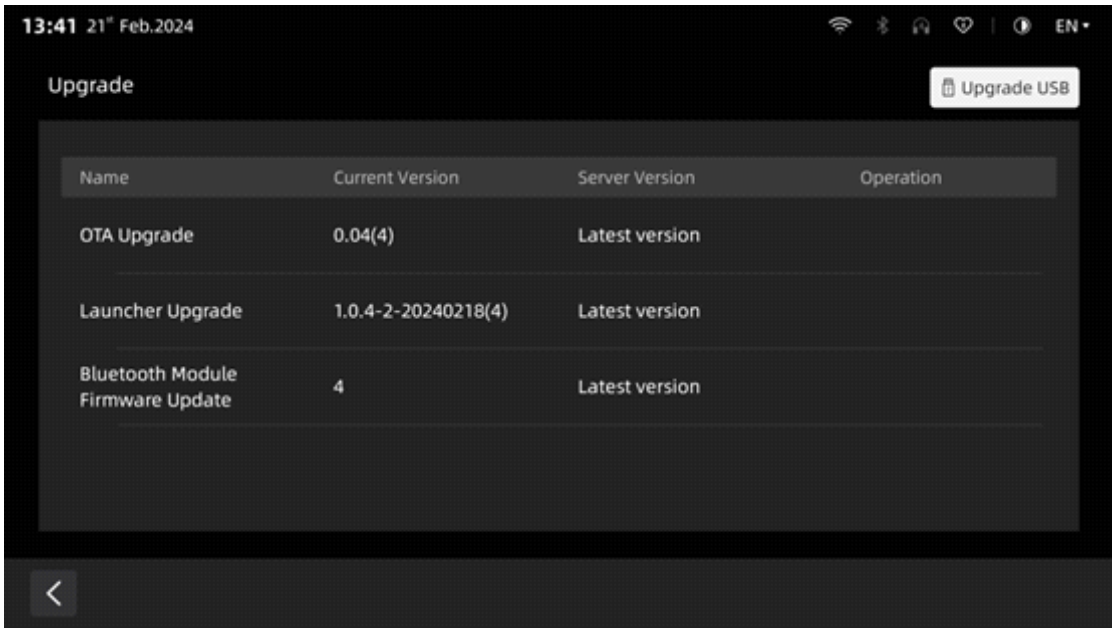

Software upgrade

Reset:

Press system reset and enter password dchealth@2019 to enter system reset settings.

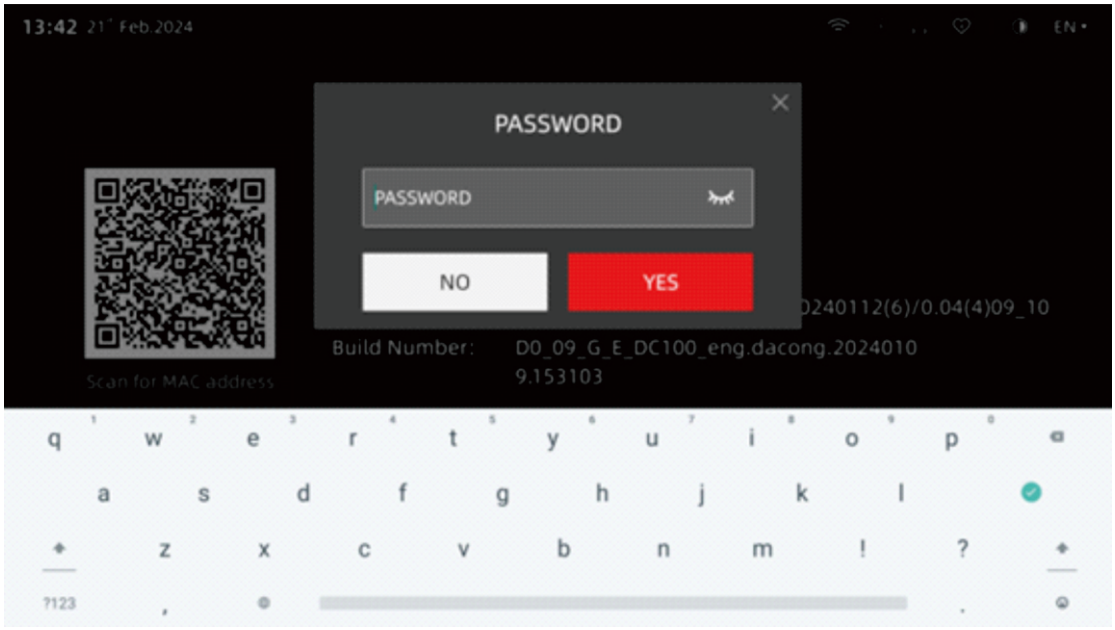

Enter password for system reset

Function Introduction

This treadmill has functions such as total mileage/total time recording, exercise time/distance setting, and maintenance reminders. Users can set their exercise time and distance according to their own needs, and perform maintenance after achieving the set goals.

Maintenance operation instructions

1. Exercise time/distance settings


Enter the "Factory Settings" menu.
Select "Basic Parameters".
Select one of the "Mileage" or "Run Time" options.
Enter and adjust to the desired mileage or time.


2. Maintenance tips and release

When exercise time or distance reaches the set goal, restart the display and it will show "Maintenance Required". Press OK to confirm. When maintenance tips is displayed, please maintain in time, otherwise the maintenance tip will still pop up after power on again. After completing the maintenance, enter Basic Parameters in Factory Settings, click maintained. The equipment will clear maintenance tip. And user can continue to exercise.

3. Automatic brightness switch

Enter the factory settings, click the basic parameters, and the automatic brightness switch can be turned on by default. After opening, the screen brightness will be automatically adjusted according to the brightness of the environment.

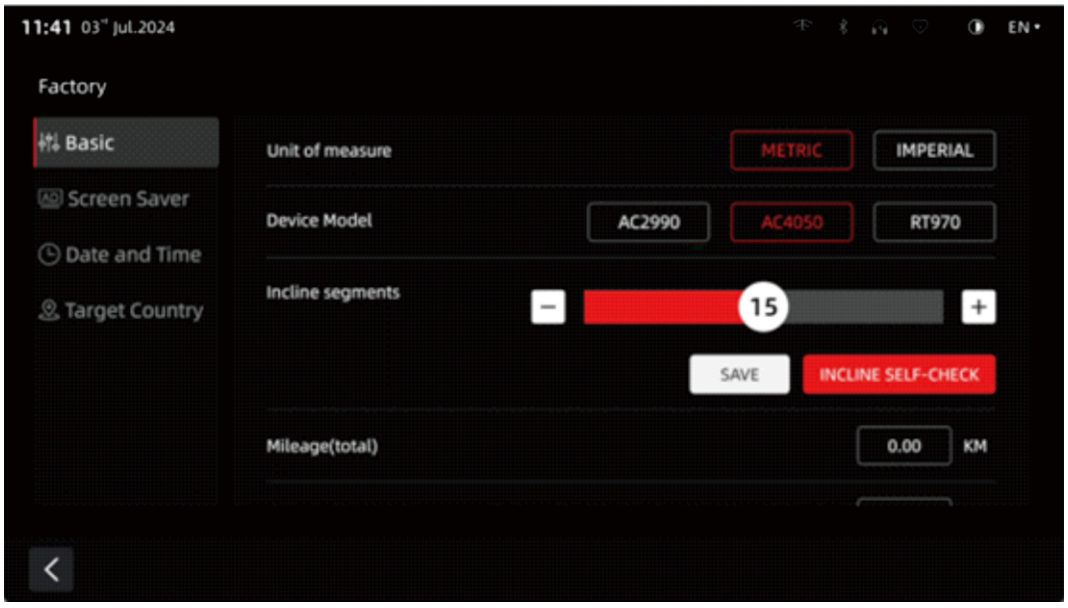

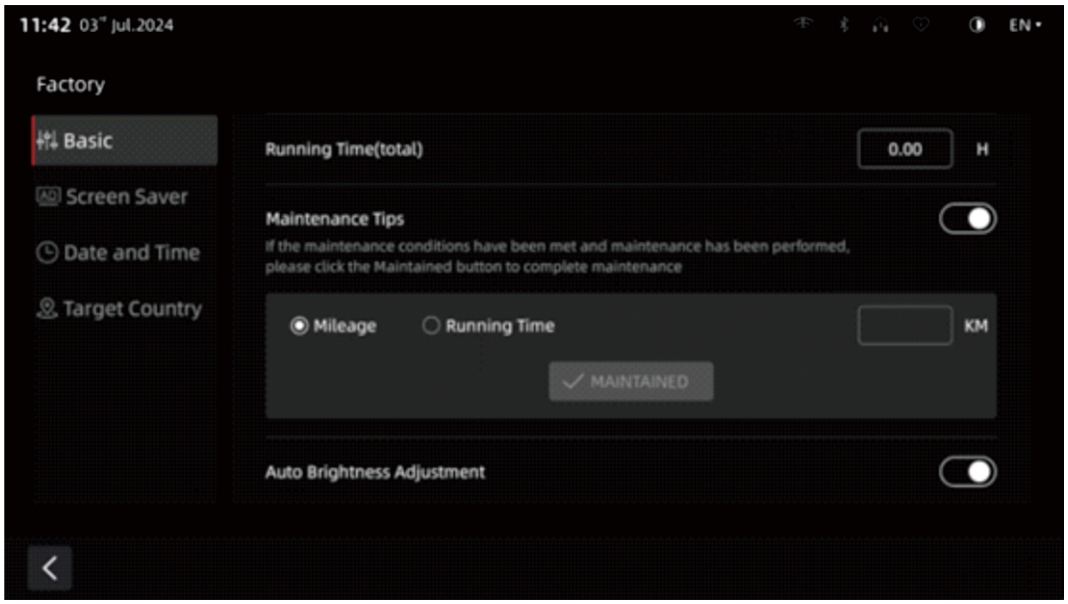

Multi country channel switching function

How to switch channels

Follow these steps to switch the channel settings of the treadmill:

1. Turn on the treadmill

Make sure the treadmill is in standby mode, then press the power button to turn it on.

2. Enter factory settings

Continuously click on the top bar in the middle of the homepage, click on Factory Settings (enter password 90638818), and enter the factory settings interface of the treadmill.

3. Select channel settings


In the shipping country, find "Channel Settings" or similar options.

4. Select the target country/region

In the channel settings menu, you will see a list of channel settings for different countries/regions. Use the up and down navigation buttons to select the channel settings for your target country/region.

Console Panel Functions



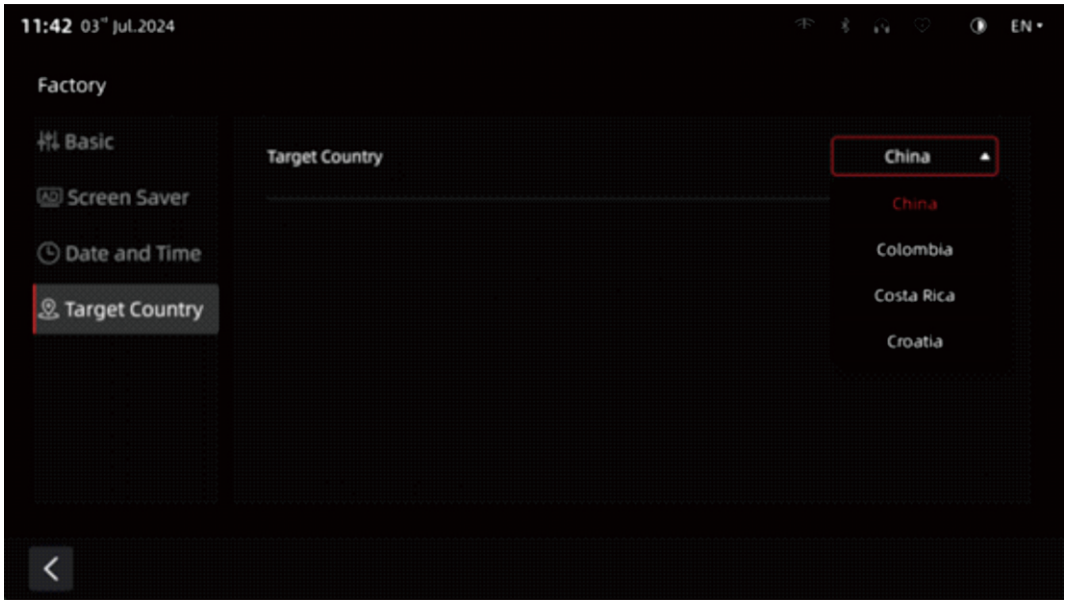

Precautions

The maintenance operation includes cleaning the running belt, checking the tightness of the wires and various components.

Please regularly maintain the equipment to ensure its normal operation and extend its service life.


If the device malfunctions, please stop using it immediately and contact after-sales service.

I hope the above instructions can help you better use and maintain the treadmill. If you have any questions, please refer to the detailed manual or contact customer service.

Troubleshooting Guide

Malfunction	Causations and Adjustment
1. Belt slips or is not on the centered on rear roller	a. Adjust the tension spring
	b. Regulate the tension board
	c. Replace the belt
	d. Call customer service
2. Noise	a. Check hybird
	b. Check bolt and bearing
	c. Check driver
	d. Call customer service
3. The console no power	a. Check all cable if loose or deflection
	b. Replace the console
	c. Replace the controller
	d. Check the power adapter
	e. Call customer service
4. Small resistance or without resistance	a. Check all belt if loose or deflection
	b. Check all cable if loose or deflection
	c. Replace the console
	d. Replace the controller
	e. Replace hybird
	f. Call customer service
5. Pedal become flexible	a. Tighten the pedal with spanner
	b. Replace the pedal
	c. Replace the crank
	d. Call customer service

Electrical Connection

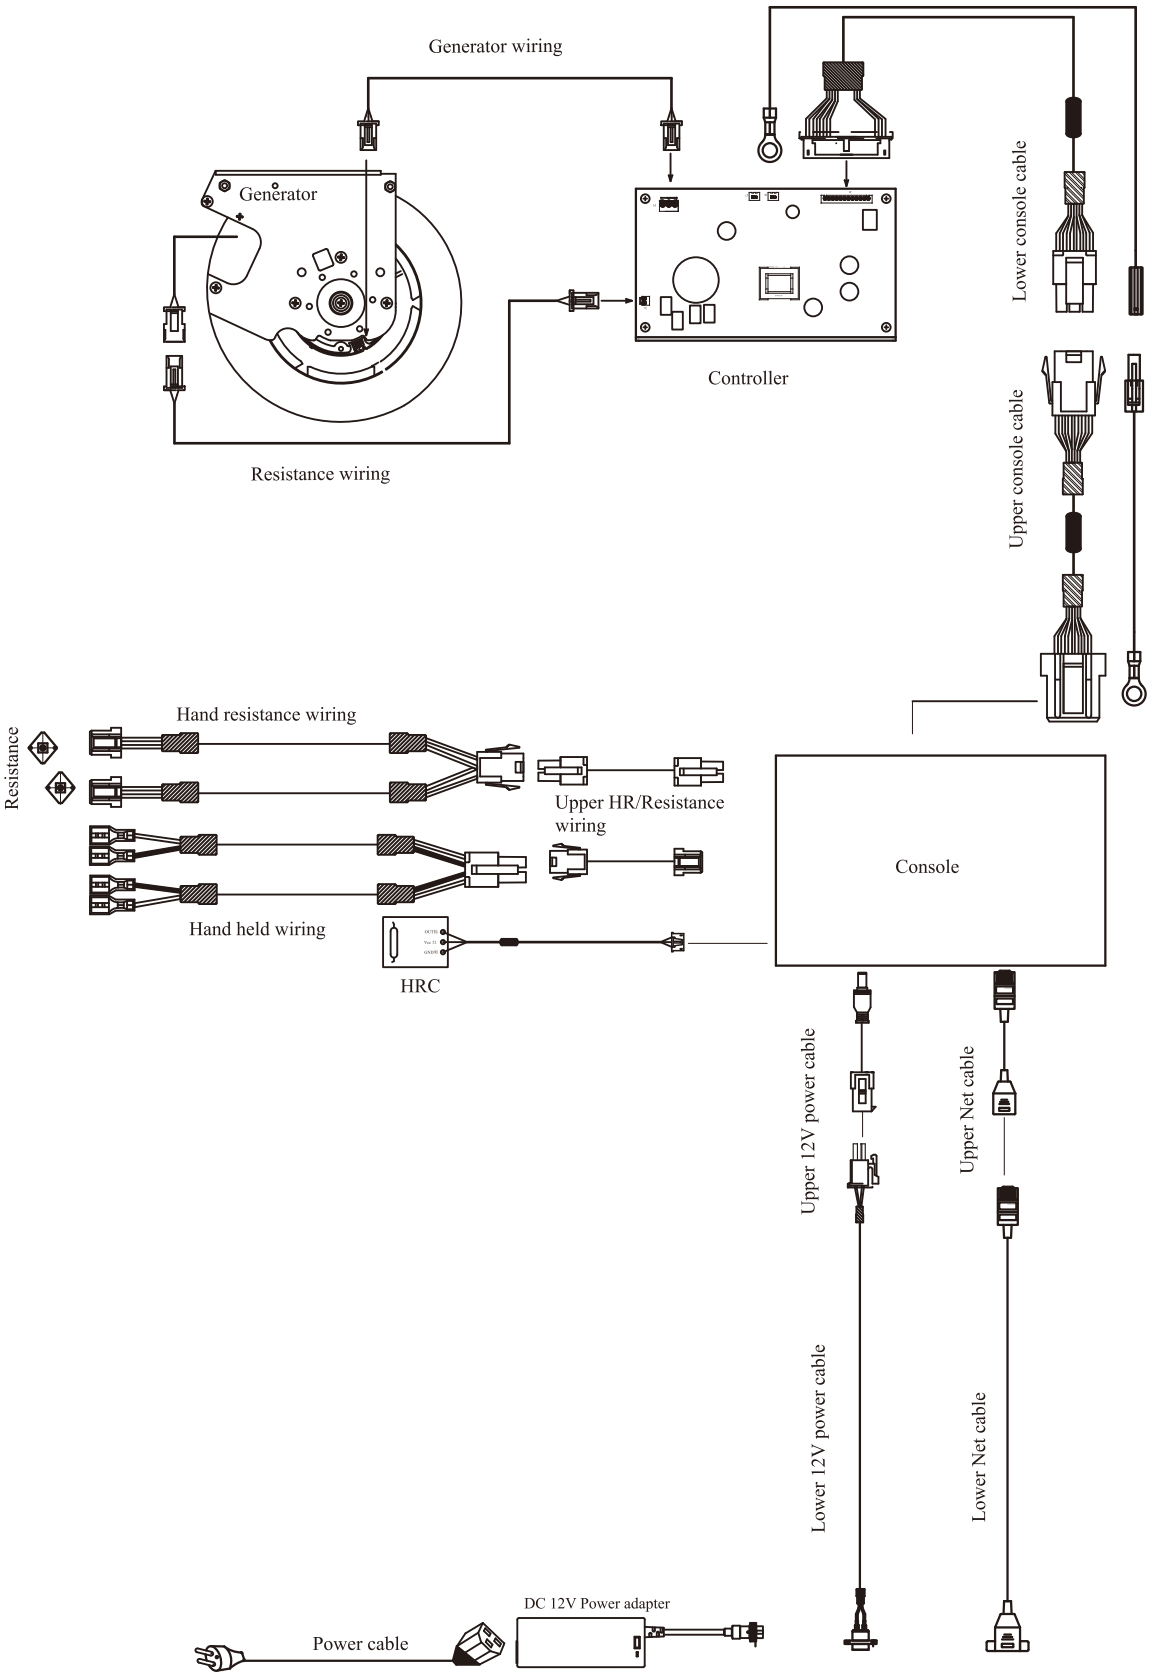

PREVENTIVE MAINTENANCE SCHEDULE						
CARDIO						
Item	*Daily*	*Weekly*	*Monthly*	*Quarterly*	*Biannual*	*Annual*
Mounting Bolts					Inspect	
Frame	Clean				Inspect	
Power Cord			Inspect			
Display Console	Clean		Inspect			
Cover	Clean					
Handlebar	Clean					
Seat	Clean					
Pedal	Clean	Lock				
Belt Tension				Inspect		
Belt					Inspect	
Lubricate Sliding Bearing and Linear Bearing			Inspect			


SYSTEM CERTIFICATION
ISO 9001
SGS
SYSTEM CERTIFICATION
ISO 14001
SGS
SYSTEM CERTIFICATION
OHSAS 18001
SGS
SYSTEM CERTIFICATION
ISO 10015
SGS